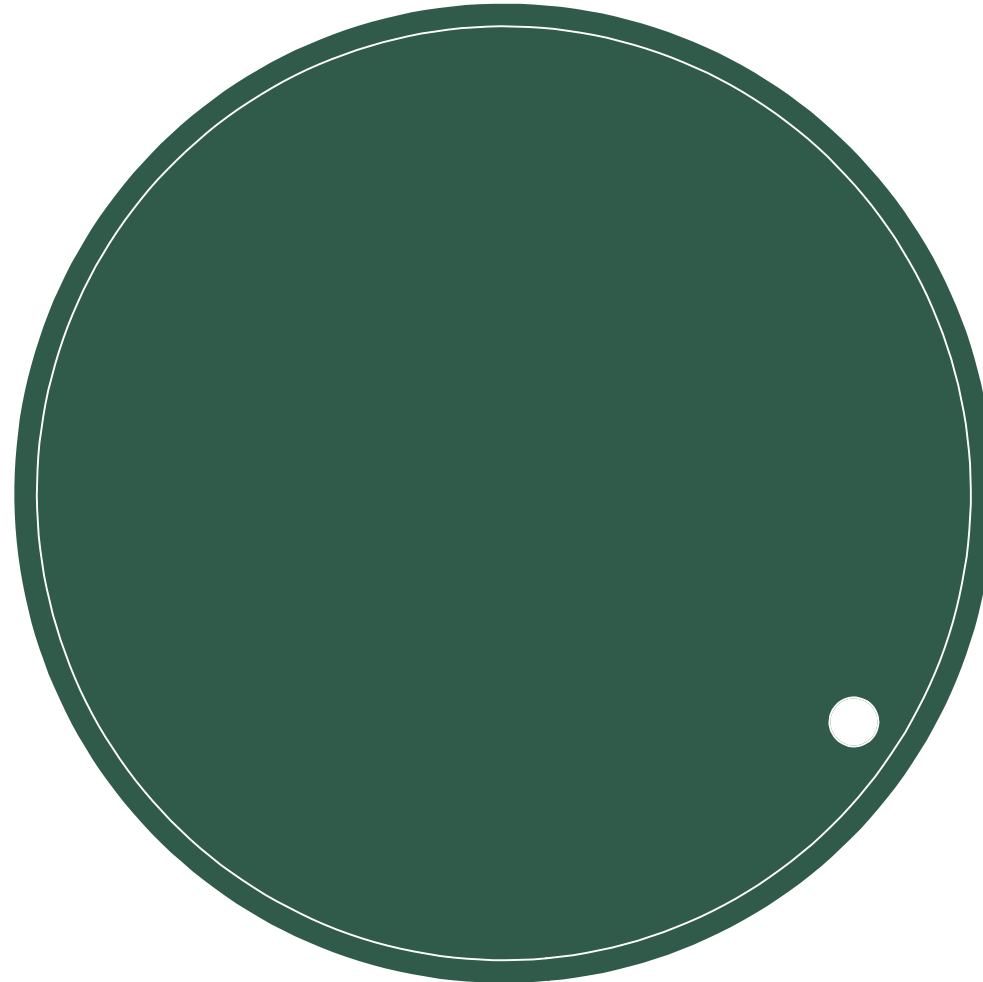
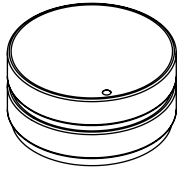


CIRCUS SOLO

#213 1

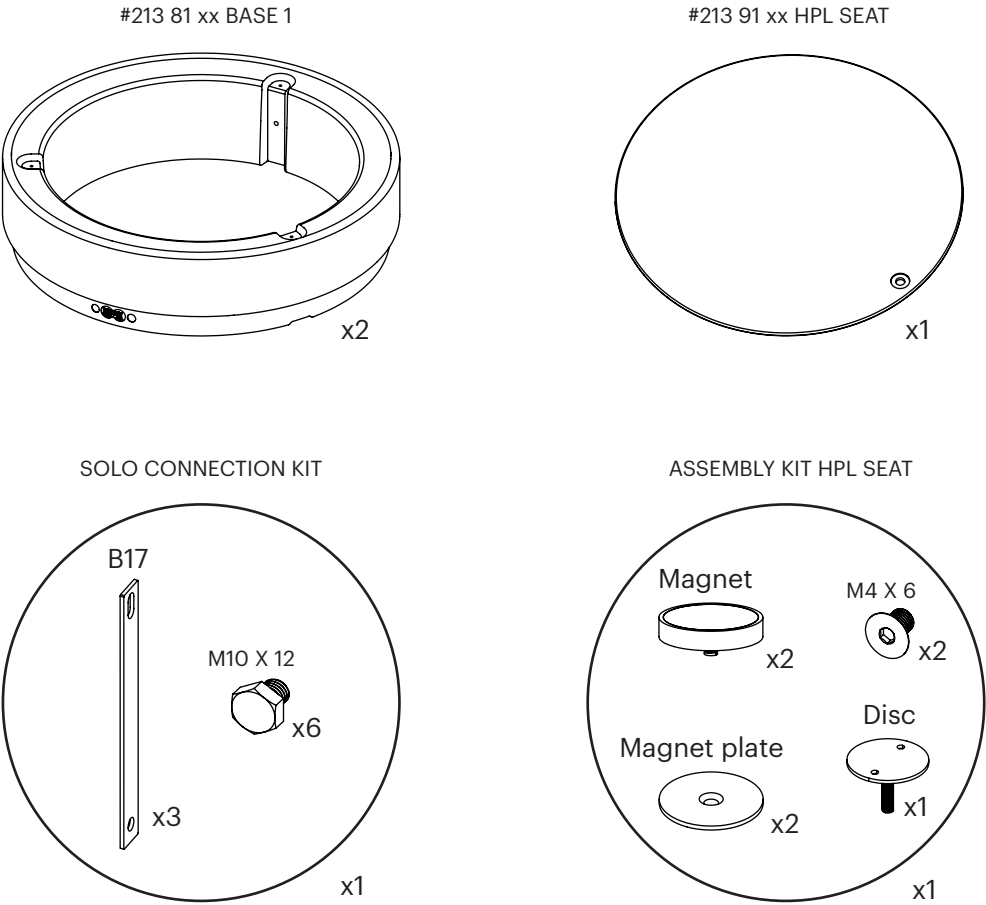


CIRCUS ASSEMBLY & CONFIGURATION VIDEO

GB
DK/DE/ES/FR

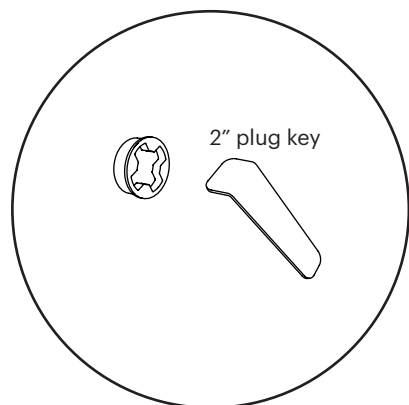
INDEX:	PAGE
Item list	01-02
Vareliste/ Artikelliste/ Lista de artículos/ Liste d'articles	
Preparing the bases	03
Klargøring af baserne/Vorbereitung die basen/Preparación de las bases/Préparation les bases	
Connection Bracket B17	03
Samlebeslag/Verbindungsbeschlag/Herraje de unión/Ferrure d'assemblage	
Filling	04
Påfyldning/ Füllung/ Relleno/ Remplissage	
HPL/Wood Seat top Fixation	04-06
Montering af sædetop/Befestigung der Sitzfläche/Fijación de la parte superior del asiento/Fixation de l'assise	
Ground Fixation B19	06
Nedgravning/ Bodenbefestigung/ Fijación al suelo / Fixation au sol	
Surface Fixation B20	07
Overflademontage/ Oberflächenmontage/ Superficie Montanosa/ Montage en saillie	
Planter / Seat & Planter top Fixation B21	07-09
Beslag til plante top/ Pflanzküben-Deckel Befestigung/ Fijación de la parte superior de la jardinera/ Fixation du dessus du bac à plantes	
Concrete Block Fixation	10-12
Fastgørelse af betonblok/Befestigung des Betonblocks/Fijación del bloque de hormigón/Fixation du bloc de béton	
Shock Absorbing Surface and Impact Area	13
Stødabsorberende overflade og stødområde/ Stoßabsorbierende Oberfläche und Aufprallbereich/ Superficie de absorción de impactos y área de impacto/Surface absorbant les chocs et zone d'impact	

ITEMS INCLUDED
DELE INKLUDERET/ENTHALTENE TEILE
PIEZAS INCLUIDAS/ PIÈCES INCLUSES

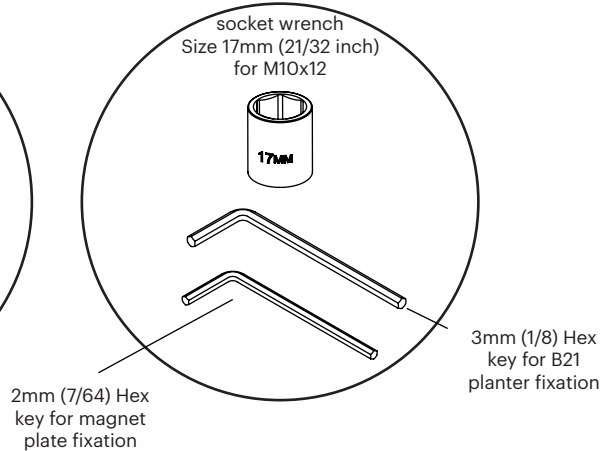
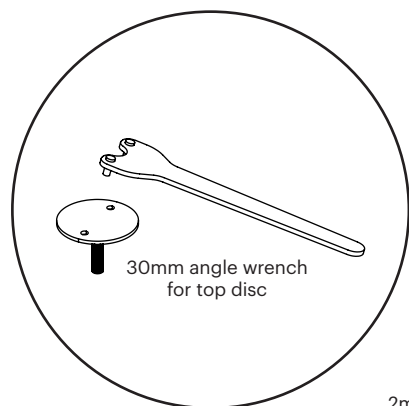


ITEMS INCLUDED

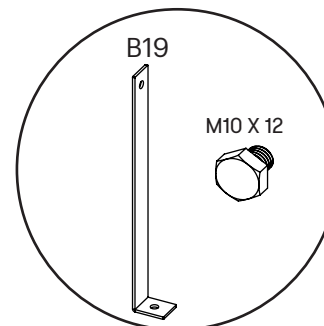
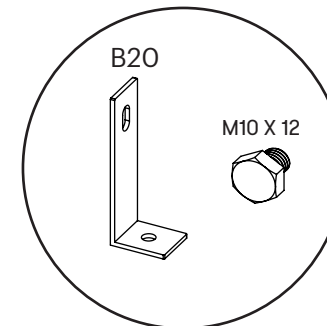
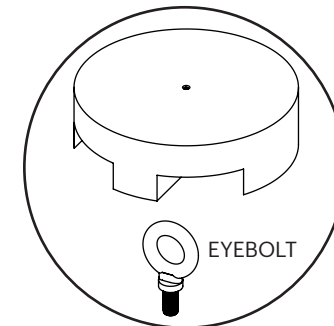
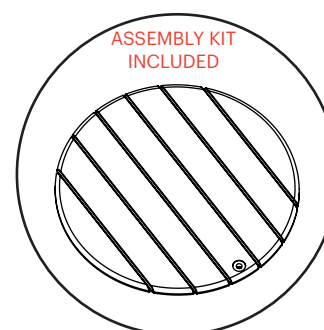
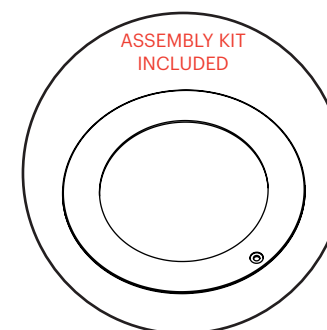
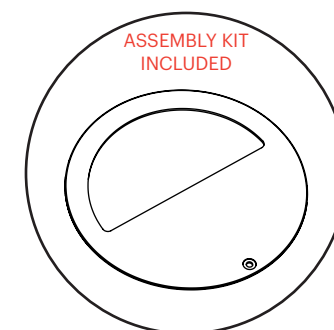
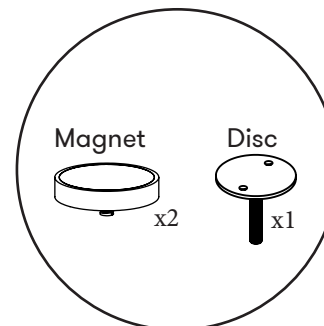
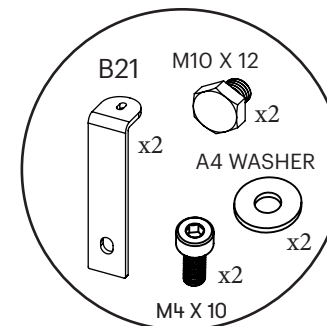
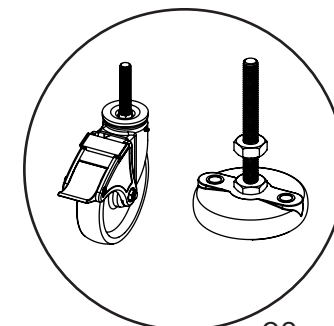
DELE INKLUDERET/ENTHALTENE TEILE
PIEZAS INCLUIDAS/ PIÈCES INCLUSES

TOOLS**TOOLS NEEDED NOT INCLUDED**


NØDVENDIGT VÆRKTØJ MEDFØLGER IKKE/BENÖTIGTES WERKZEUG NICHT ENTHALTEN
HERRAMIENTAS NECESARIAS NO INCLUIDAS/OUTILS NÉCESSAIRES NON INCLUS

**OPTIONAL SELECTION**

TILVALG / OPTIONEN / OPCIONES / OPTIONS

GROUND FIXATION**SURFACE FIXATION****CONCRETE BLOCK****213 00 WOOD TOP****213 93 xx PLANTER TOP****213 94 xx SEAT & PLANTER TOP****ASSEMBLY KIT WOOD TOP****ASSEMBLY KIT HPL PLANTER TOP****WHEELS & FEET**

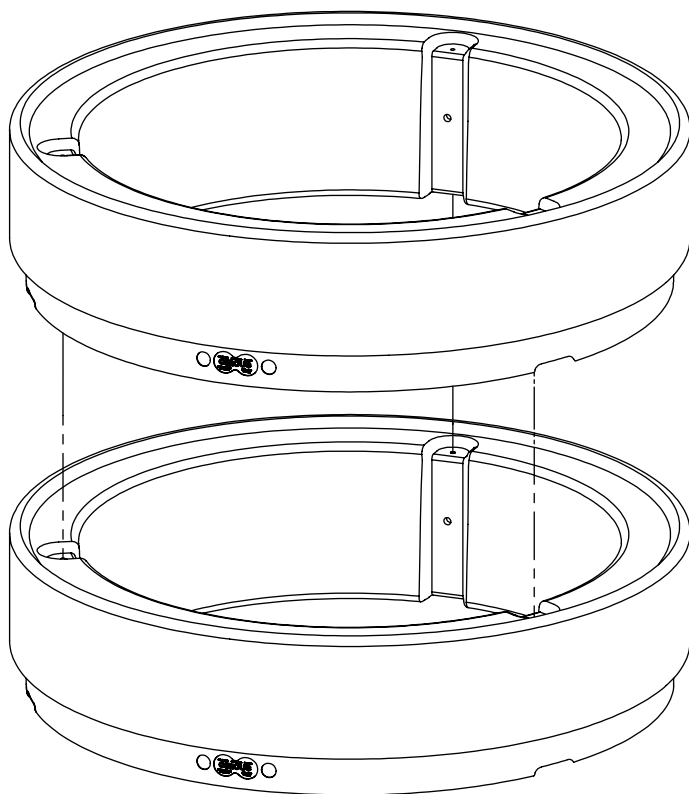
SOLO

**PREPARING THE BASES**

KLARGØRING AF BASERNE/VORBEREITUNG DIE BASEN
PREPARACIÓN DE LAS BASES/PRÉPARATION LES BASES


1. STACK THE TWO BASES

STABLE DE TO BASER/STAPELN SIE DIE BEIDEN BASEN
APILE LAS DOS BASES/EMPILEZ LES DEUX BASES

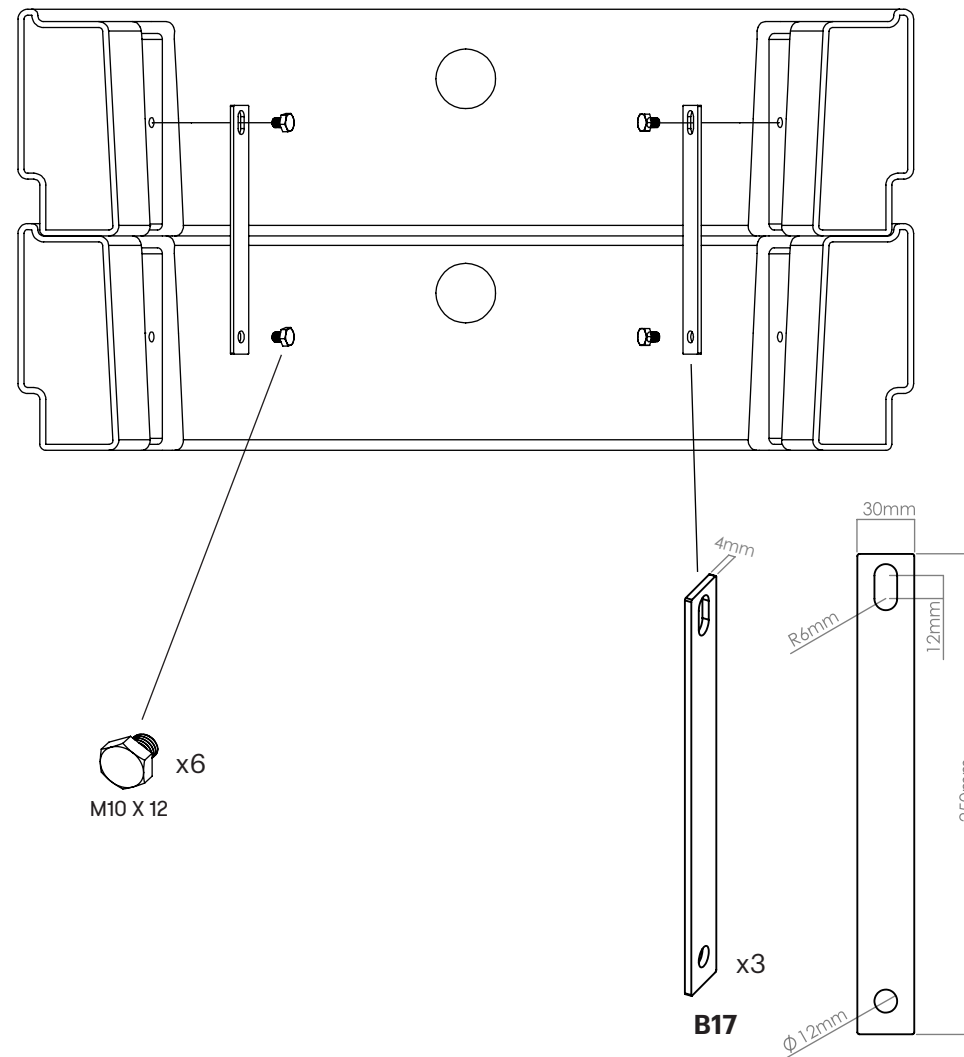
**2. ALIGN THE INSERTS**

TILPAS INDSATSERNE/RICHTEN SIE DIE EINSÄTZE AUS
ALINEE LAS INSERCIONES/ALIGNEZ LES INSERTS


SOLO

**B17 - CONNECTION BRACKET**

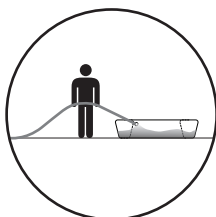
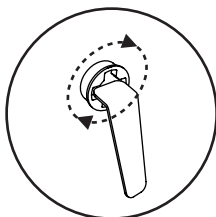
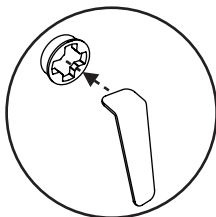
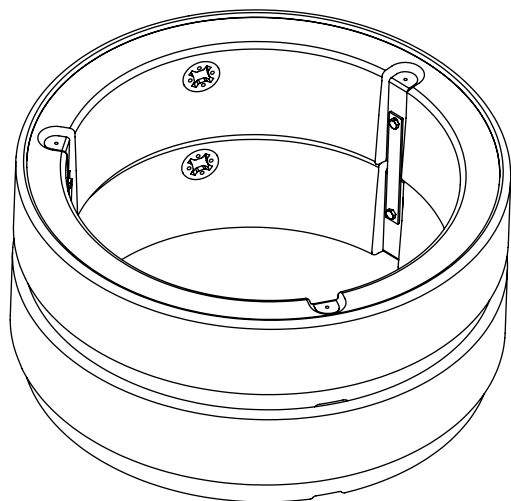
SAMLEBESLAG / VERBINDUNGSBESCHLAG /
HERRAJE DE UNIÓN / FERRURE D'ASSEMBLAGE



03




WATER
VAND/WASSER/AGUA/EAU



SOLO (16 kg)
+ 60 L
~ 76 kg

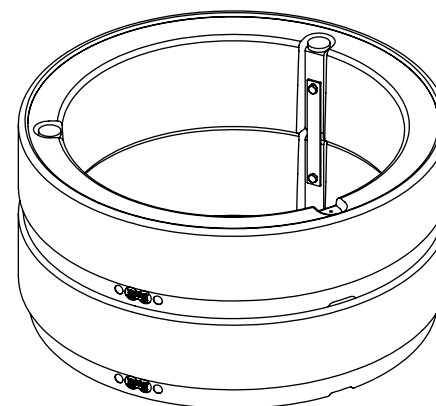
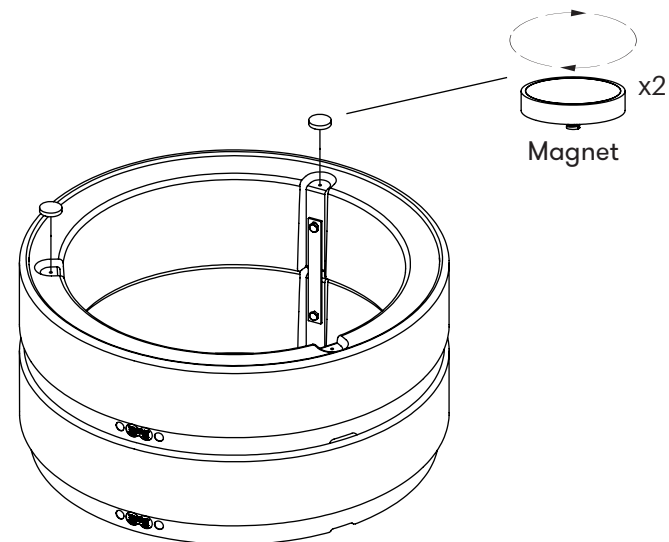
Measurements are excl top

SOLO




HPL/WOOD SEAT TOP - FIXATION ASSEMBLY
MONTERING AF SÆDETOP/BEFESTIGUNG DER SITZFLÄCHE/
FIJACIÓN DE LA PARTE SUPERIOR DEL ASIENTO/ FIXATION DE
L'ASSISE

1. MAGNET
IMÁN/AIMANT

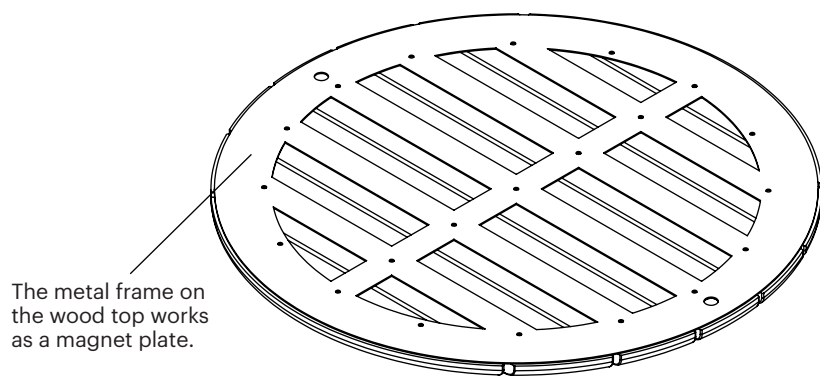
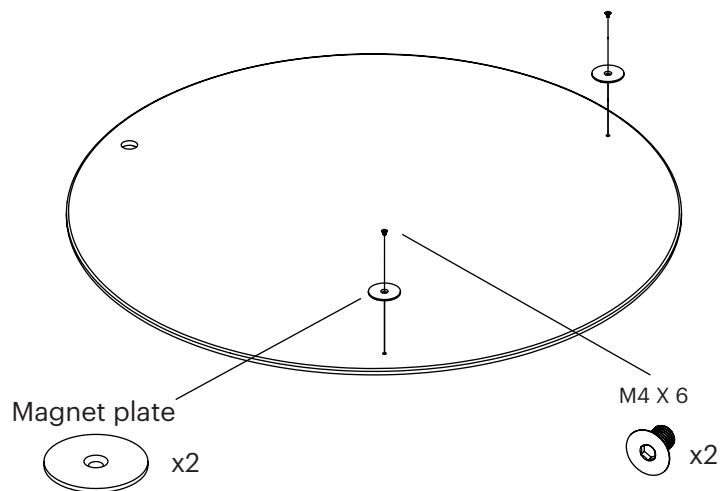


SOLO



2. MAGNET PLATE ONLY FOR HPL TOP

MAGNETPLADE/MAGNETPLATTE/PLACA MAGNÉTICA/PLAQUE MAGNÉTIQUE



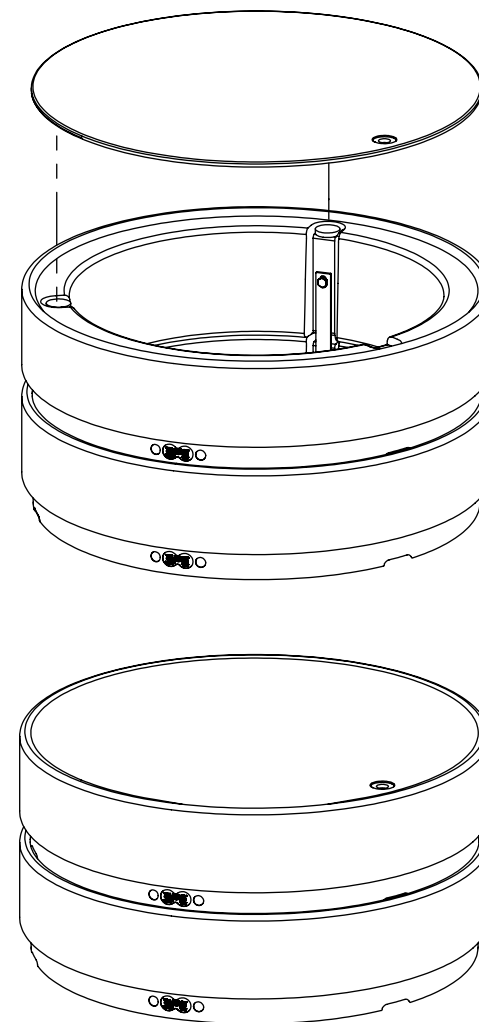
3. FITTING THE TOP

MONTERING AF TOPPEN/
MONTAGE DES DECKELS/
COLOCACIÓN DE LA TAPA/
INSTALLATION DU DESSUS


1. Align the magnet plates on the top with the magnets in the base.

2. Gently lower the top connecting the magnets.

Make sure the insert in the base align with the hole in the top



SOLO



4. TIGHTEN THE DISC

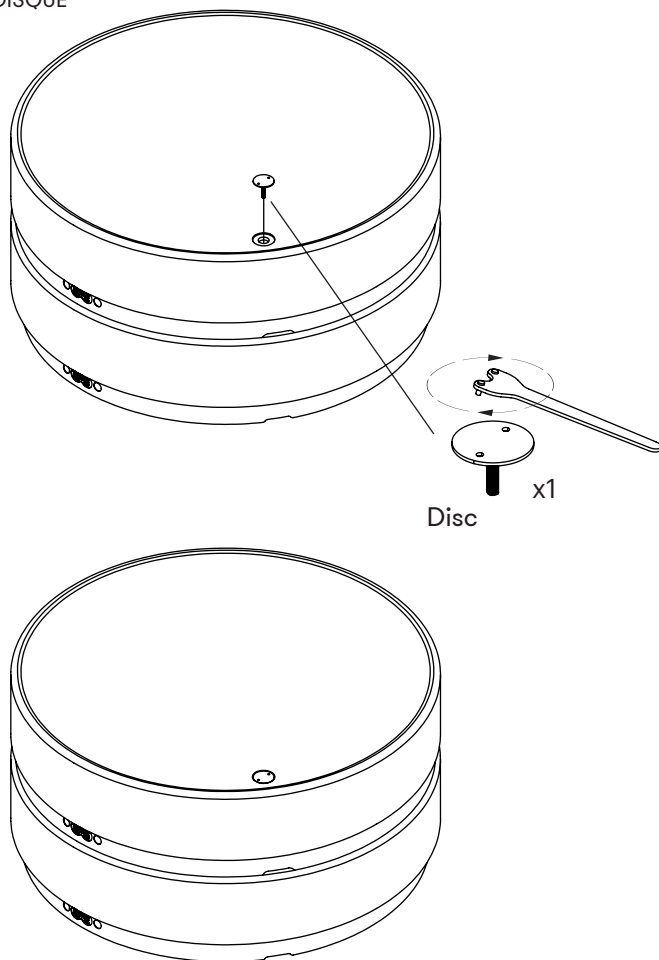
STRAM DISKEN/SCHEIBE ANZIEHEN
APRIETE EL DISCO/SERREZ LE DISQUE

1. Place the disc in the top hole and tighten it with your hands.


Make sure to keep it vertical

2. Tighten the disc with the wrench spanner.

Do not over tighten

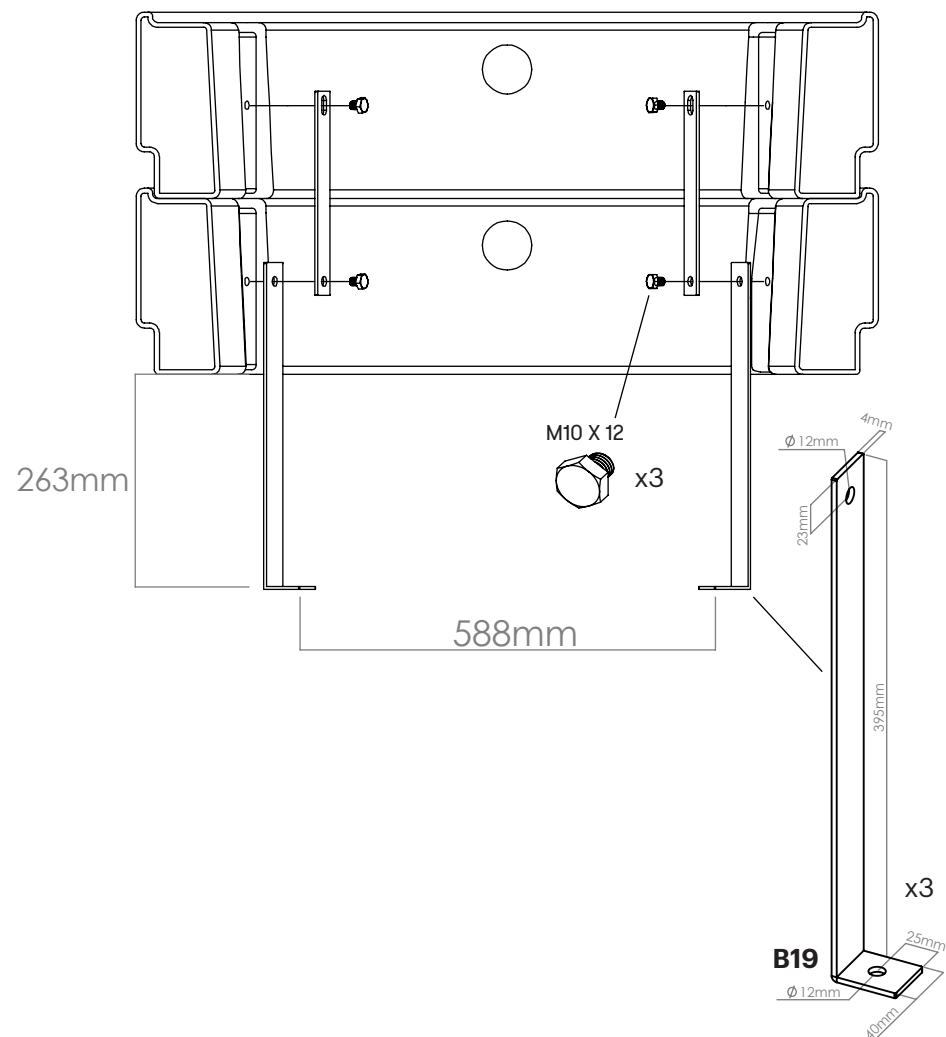


SOLO




B19 - GROUND FIXATION BRACKET

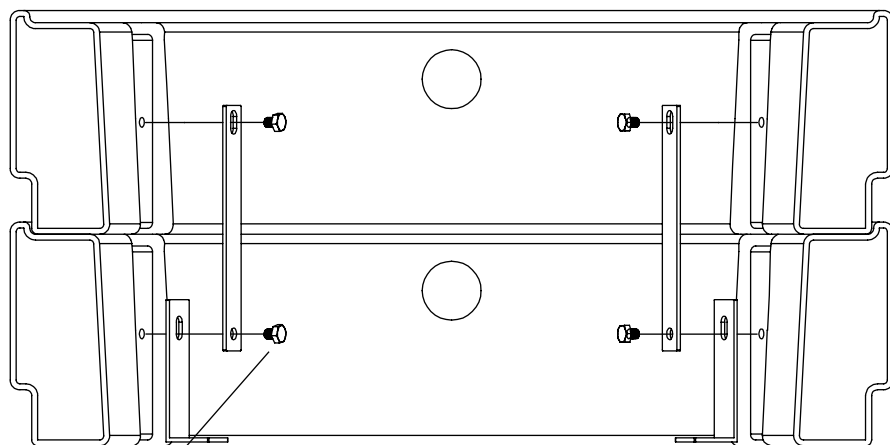
NEDGRAVNING / BODENBEFESTIGUNG /
FIJACIÓN AL SUELO / FIXATION AU SOL



SOLO

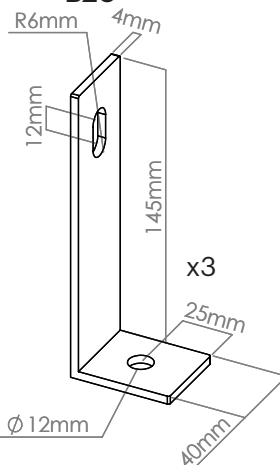
**B20 - SURFACE FIXATION**

OVERFLADEMONTNERING/OBERFLÄCHENMONTAGE/
SUPERFICIE MONTANOSA/MONTAGE EN SAILLIE




M10 X 12

x3

B20

SOLO

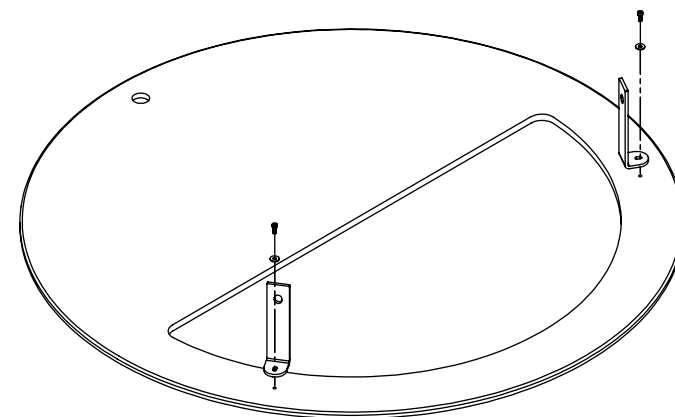
**B21 - PLANTER/SEAT & PLANTER TOP FIXATION**

MONTERING AF PLANTE TOP/BEFESTIGUNG DES PFLANZKÜ-
BEL-DECKELS/FIJACIÓN DE LA PARTE SUPERIOR DE LA
JARDINERA/FIXATION DU DESSUS DU BAC À PLANTES

1A. BRACKET FIXATION

FASTGØRELSE AF BESLAG/HALTERUNGSBEFESTIGUNG/FIJACIÓN DEL SOPORTE/FIXA-
TION DU SUPPORT

Place the top
up-side down and
fixate the B21 bracket
with the M4X10
with the washer
inbetween.



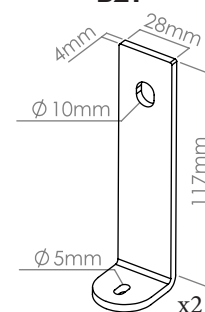
Make sure to protect
the top surface
when placing it
up-side down

M4 X 10

x2

A4 WASHER Ø4MM


x2

B21

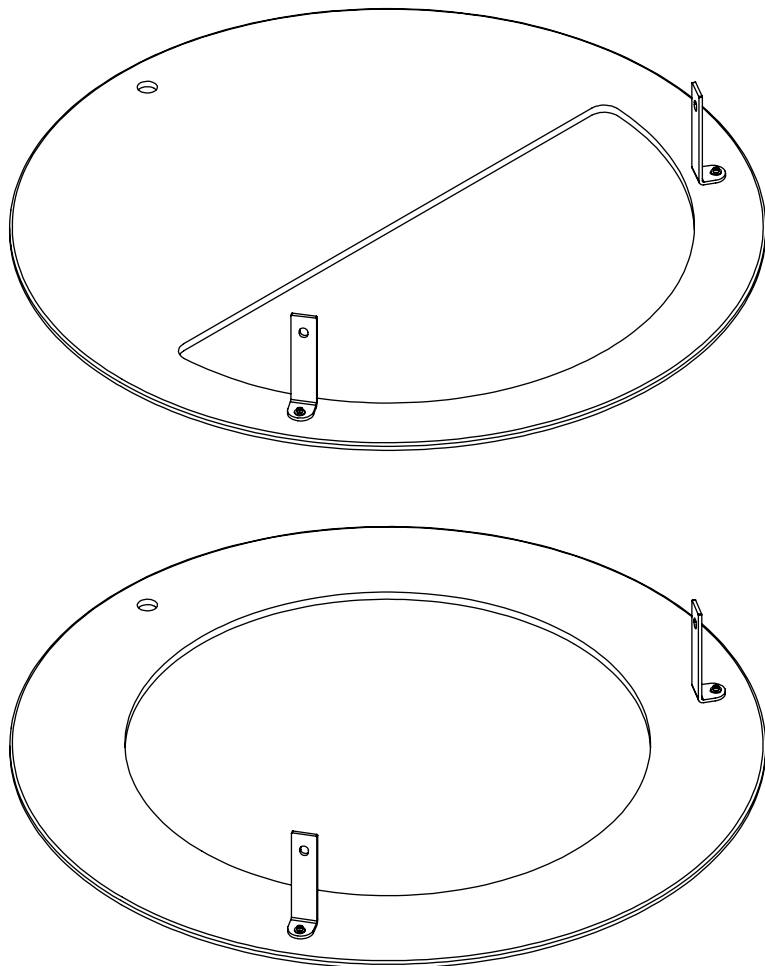
x2

07

SOLO

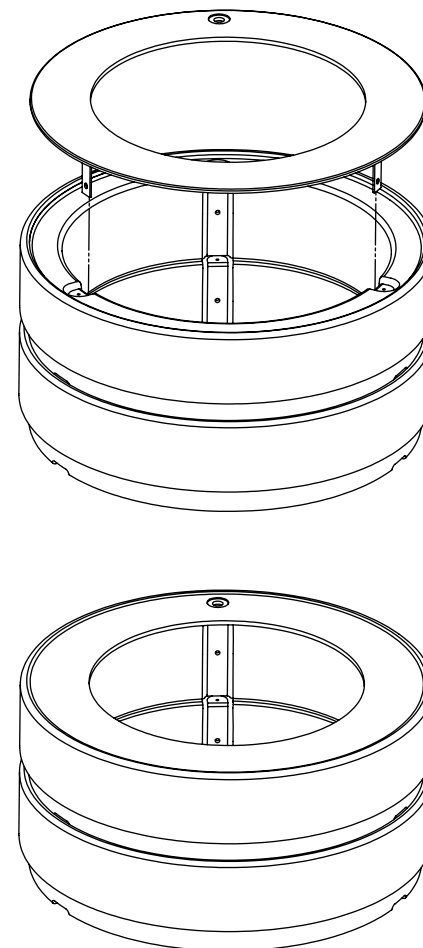
**1B. BRACKET FIXATION**

FASTGØRELSE AF BESLAG/HALTERUNGSBEFESTIGUNG/FIJACIÓN DEL SOPORTE/FIXATION DU SUPPORT


**2. PLACE THE TOP ON THE BASE**

PLACER TOPPEN PÅ BASEN/
SETZEN SIE DEN DECKEL AUF DEN BODEN/
COLOQUE LA TAPA SOBRE LA BASE/
PLACEZ LE DESSUS SUR LA BASE

The B21 bracket can
be fit on the inside
and the outside of the
connection brackets
B17 and B18.



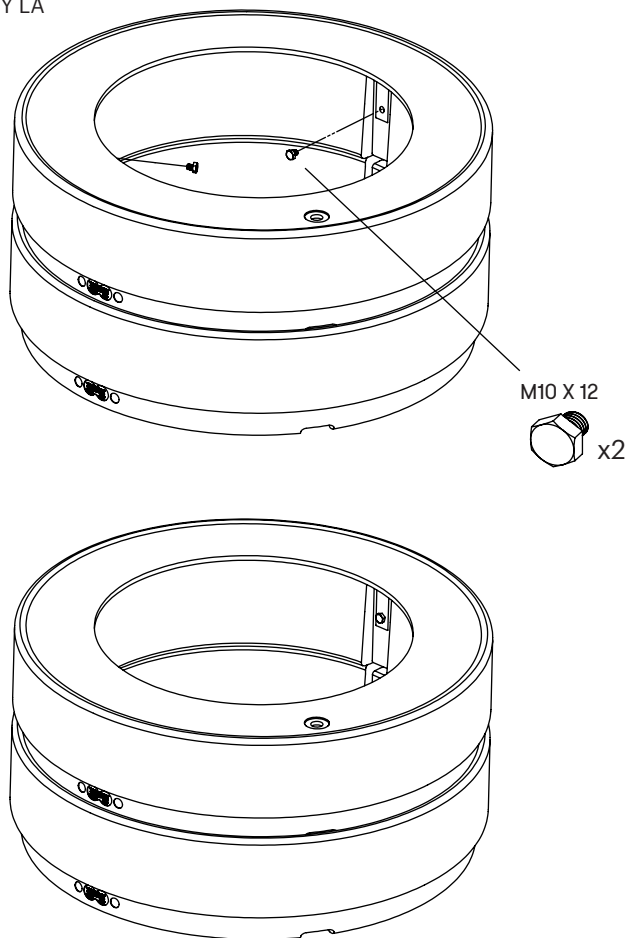
SOLO

**3. BASE & TOP FIXATION**

FASTGØRELSE AF BASE & TOP/
BEFESTIGUNG VON BODEN UND
DECKEL/FIJACIÓND E LA BASE Y LA
PARTE SUPERIOR/FIXATION
DE LA BASE ET DU DESSUS

Fixate the B21 bracket
into the insert in the
base with the M10x12

Keep in mind if your are
using connection or/and
ground/surface brackets
to place them aligned so
the connection bracket
is fixated straight.

**4. TIGHTEN THE DISC**

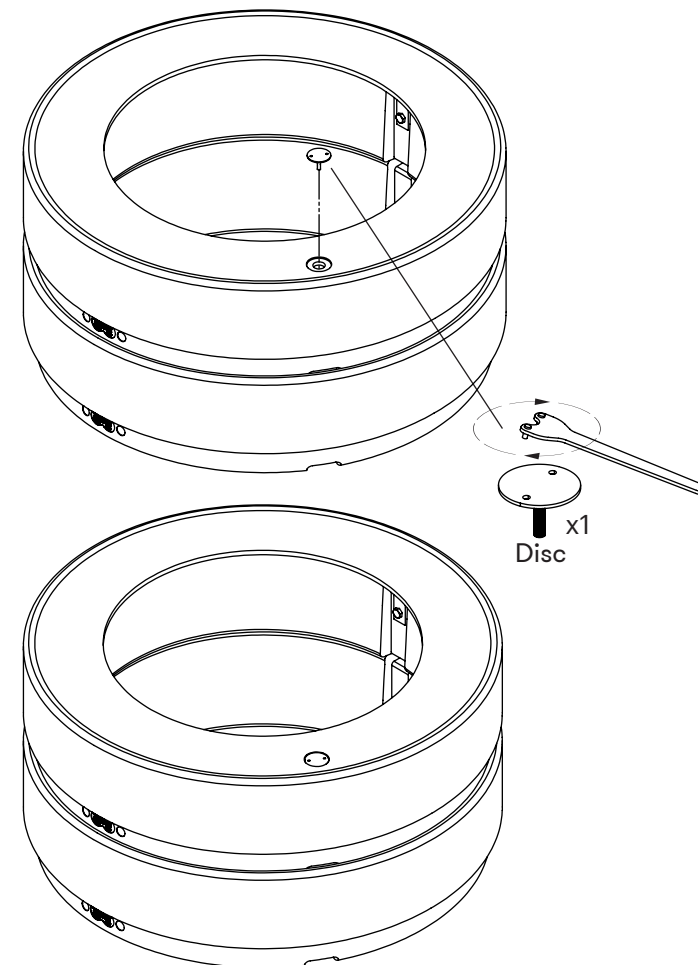
STRAM DISKEN/SCHEIBE ANZIEHEN
APRIETE EL DISCO/SERREZ LE DISQUE

1. Place the disc in the
top hole and tighten it
with your hands.


Make sure to keep it
vertical

2. Tighten the disc with
the wrench spanner.

Do not over overtighten



SOLO

**B22 - CONCRETE BLOCK FIXATION**

FASTGØRELSE AF BETONBLOK/BEFESTIGUNG DES
BETONBLOCKS/FIJACIÓN DEL BLOQUE DE HORMIGÓN/
FIXATION DU BLOC DE BÉTON

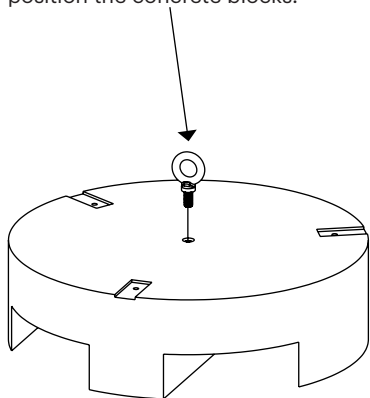
1. POSITION CONCRETE BLOCKS

PLACERING AF BETONBLOKKE/
POSITIONIERUNG DER BETONBLÖCKE/
COLOCACIÓN DE LOS BLOQUES DE
HORMIGÓN/ POSITIONNEMENT DES BLOCS DE
BÉTON

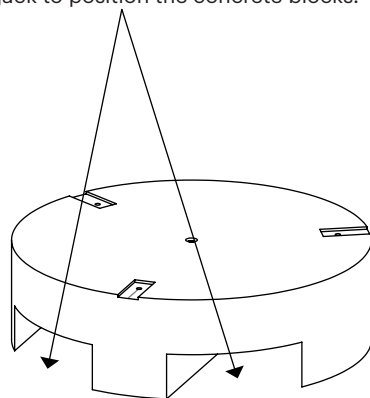
Position all concrete blocks according to the selected Circus configuration.
Ensure a centre-to-centre distance of 900 mm between the M16 inserts
located at the centre of each concrete block.

OPTION A – CRANE

Use the lifting eye and a crane to
position the concrete blocks.

**OPTION B – PALLET JACK**

If a crane is not available, use a pallet
jack to position the concrete blocks.

**WEIGHT & THEFT SECURITY**

The concrete blocks add sufficient weight to the assembled configuration to meet out-sider's
recommended minimum total weight of 250 kg for increased theft security in public urban
environments.

Concrete blocks required: 2 pcs.

Minimum total assembled weight for solo: 256 kg

out-sider a/s
Kigkurren 8A, Islands Brygge
DK-2300 Copenhagen S

info@out-sider.dk
outsiderfurniture.com

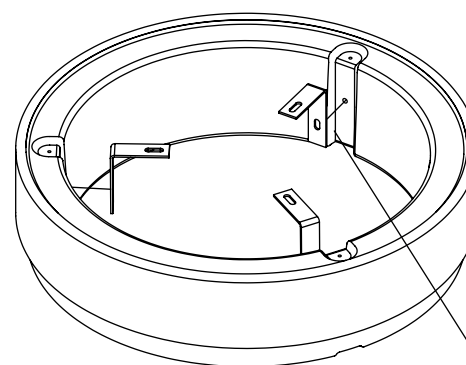
2. ATTACH BRACKETS

MONTERING AF BESLAG/
MONTAGE DER HALTERUNGEN/MONTAJE DE
LOS SOPORTES/MONTAGE DES SUPPORTS

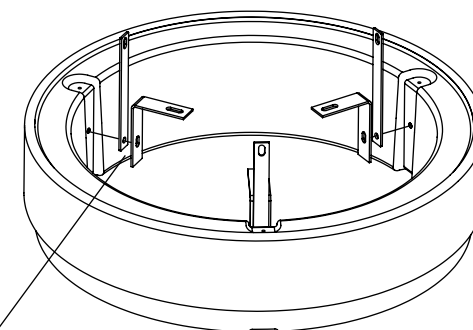
Attach bracket B22 and all required connection brackets to the
Circus bases before positioning the bases over the concrete
blocks.

OPTION A – B22 ONLY

Attach bracket B22 to Level 1 Circus
bases.

**OPTION B – B22 + CONNECTION BRACKET**


Attach bracket B22 and the required
connection bracket B17 or B18 to Circus
bases that are to be stacked.



M10 X 12



SOLO

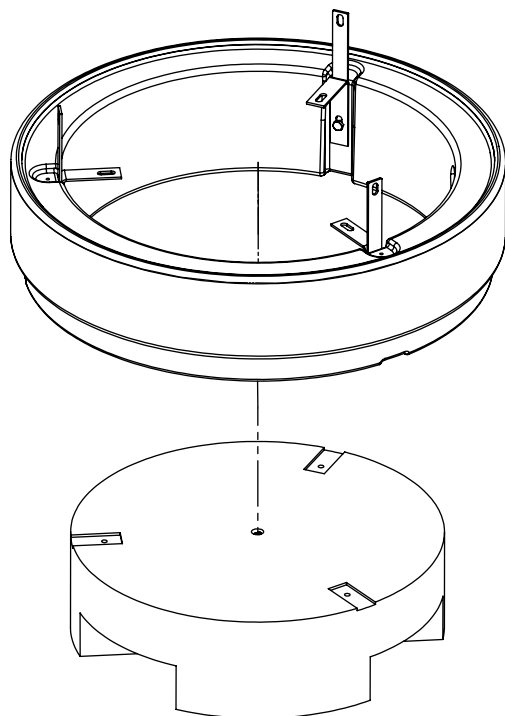
**B22 - CONCRETE BLOCK FIXATION**

FASTGØRELSE AF BETONBLOK/BEFESTIGUNG DES
BETONBLOCKS/FIJACIÓN DEL BLOQUE DE HORMIGÓN/
FIXATION DU BLOC DE BÉTON

3. POSITION BASES

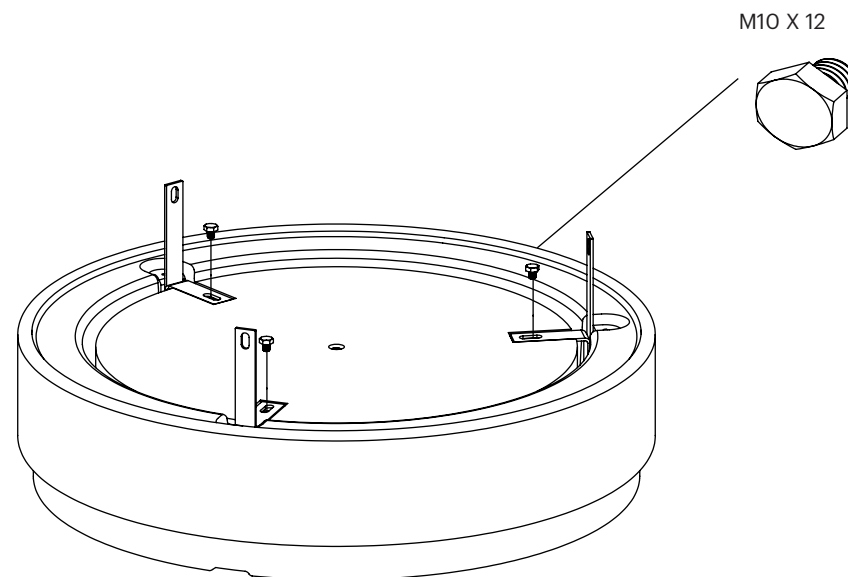
PLACERING AF BASER/
POSITIONIERUNG DER BASELEMENTE/COLO-
CACIÓN DE LAS BASES/POSITIONNEMENT DES
BASES

Lift the Circus bases over the concrete blocks and carefully lower them into position. Make sure bracket B22 aligns with the 3 × M10 inserts on top of the concrete block.


**4. SECURE CONCRETE BLOCKS**

FASTGØRELSE AF BETONBLOKKE/
BEFESTIGUNG DER BETONBLÖCKE/FIJACIÓN
DE LOS BLOQUES DE HORMIGÓN/FIXATION
DES BLOCS DE BÉTON

Secure bracket B22 to the M10 inserts
on top of the concrete block.



SOLO

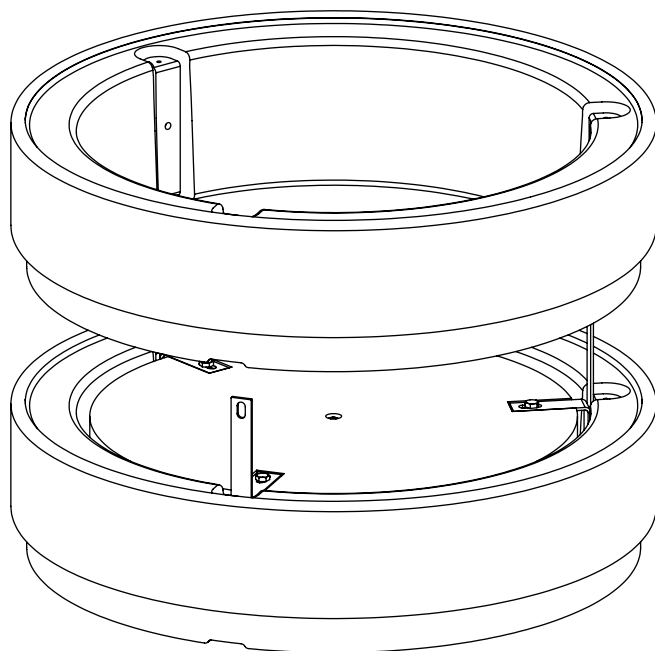
**B22 - CONCRETE BLOCK FIXATION**

FASTGØRELSE AF BETONBLOK/BEFESTIGUNG DES
BETONBLOCKS/FIJACIÓN DEL BLOQUE DE HORMIGÓN/
FIXATION DU BLOC DE BÉTON

5. CONNECT / STACK BASES

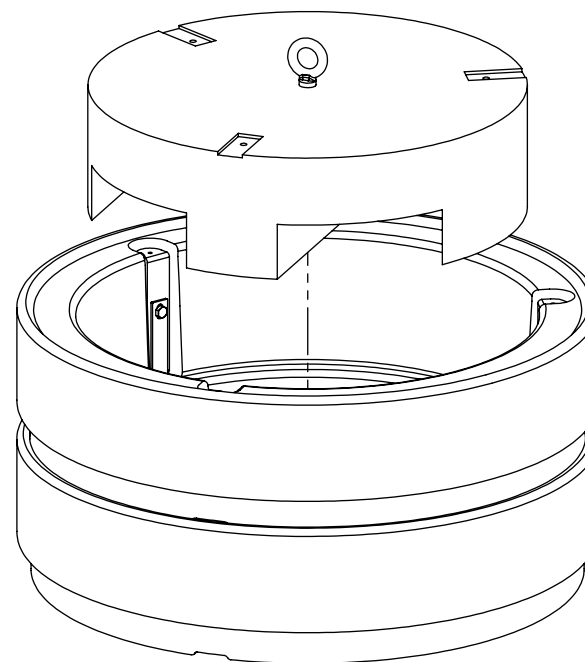
SAMLING / STABLING AF BASER/
VERBINDEN / STAPELN DER BASISELEMENTE/
UNIÓN / APILADO DE LAS BASES/ASSEMBLAGE
/ EMPILAGE DES BASES

At concrete block positions
where Circus bases are stacked,
position the next base and secure
it to the pre-installed connection
brackets using M10×12 screws in
the base inserts.

**6. POSITION UPPER CONCRETE BLOCK**

PLACERING AF ØVRE BETONBLOK/
POSITIONIERUNG DES OBEREN BETONBLOCKS/
COLOCACIÓN DEL BLOQUE DE HORMIGÓN
SUPERIOR/POSITIONNEMENT DU BLOC DE BÉTON
SUPÉRIEUR

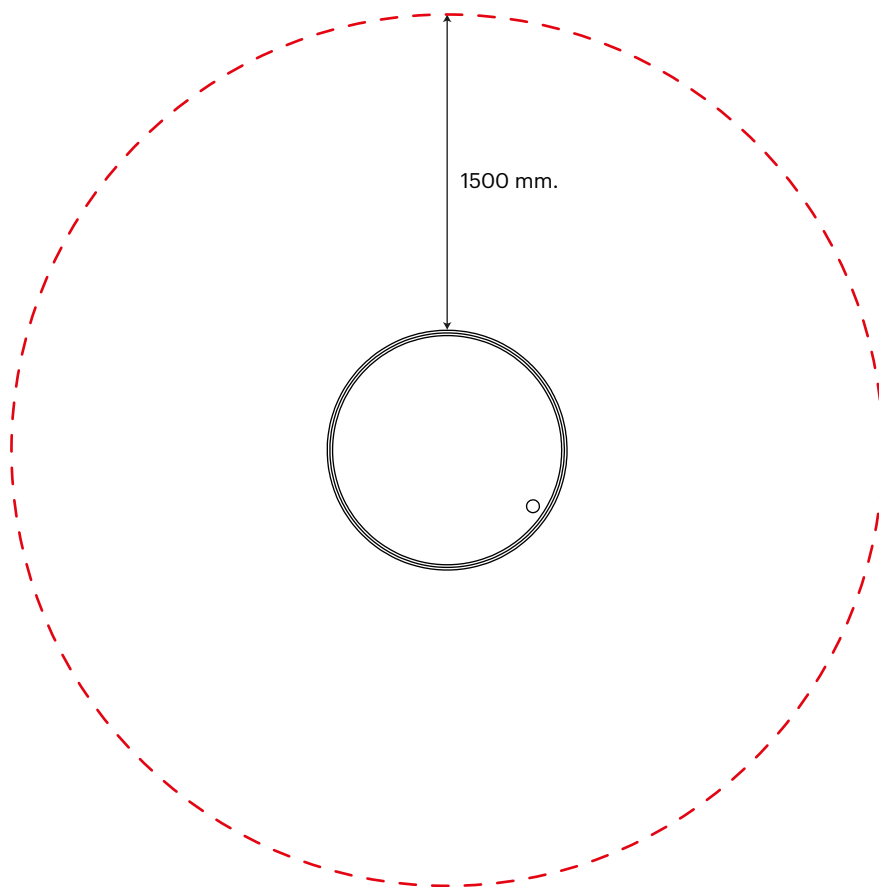
After connecting the two Circus bases, carefully
lower the second concrete block into the upper base
and position it on top of the secured concrete block.



NOTE: Two concrete blocks cannot be installed in the Solo configuration when using
Planter or Seat & Planter tops.

SHOCK ABSORBING SURFACE AND IMPACT AREA

Stødabsorberende overflade og stødområde/
 Stoßabsorbierende Oberfläche und Aufprallbereich/
 Superficie de absorción de impactos y área de impacto/
 Surface absorbant les chocs et zone d'impact



GB

Shock absorbing surface and the extension of impact area.
 In accordance with EN 1176-1:2023 we recommend an impact area of 1500mm
 (see dotted line)

For equipment with a fall height (FH) >600mm, the max. FH for the impact
 absorbing surface material shall be documented.

Note: The max. FH for the Circus Solo is 440mm.

DK

Stødabsorberende overflade og udvidelse af stødområdet.
 I overensstemmelse med EN 1176-1:2023 anbefaler vi et stødområde på 1500 mm
 (se stiple linje)

For udstyr med en faldhøjde (FH) >600mm, må max. FH for virkningen
 absorberende overflademateriale skal dokumenteres.

Bemærk: Den max. FH for Circus Solo er 440 mm.

DE

Stoßabsorbierende Oberfläche und Vergrößerung der Aufprallfläche.
 Gemäß EN 1176-1:2023 empfehlen wir eine Aufprallfläche von 1500 mm
 (siehe gestrichelte Linie)

Bei Geräten mit einer Fallhöhe (FH) >600mm beträgt die max. FH für die Wirkung
 absorbierendes Oberflächenmaterial ist zu dokumentieren.

Hinweis: Die max. FH für die Circus Solo beträgt 440 mm.

ES

Superficie amortiguadora y extensión del área de impacto.
 De acuerdo con EN 1176-1:2023 recomendamos un área de impacto de 1500 mm
 (ver línea de puntos)

Para equipos con una altura de caída (FH) >600 mm, el máximo. FH por el impacto
 Se documentará el material de la superficie absorbente.

Nota: El máx. FH para el Circus Solo es de 440 mm.

FR

Surface absorbant les chocs et extension de la zone d'impact.
 Conformément à la norme EN 1176-1:2023, nous recommandons une zone d'impact de
 1500 mm (voir ligne pointillée)

Pour les équipements avec une hauteur de chute (FH) >600 mm, la hauteur max. FH pour
 l'impact
 Le matériau de surface absorbant doit être documenté.

Remarque : Le maximum. FH pour le Circus Solo est de 440 mm.