
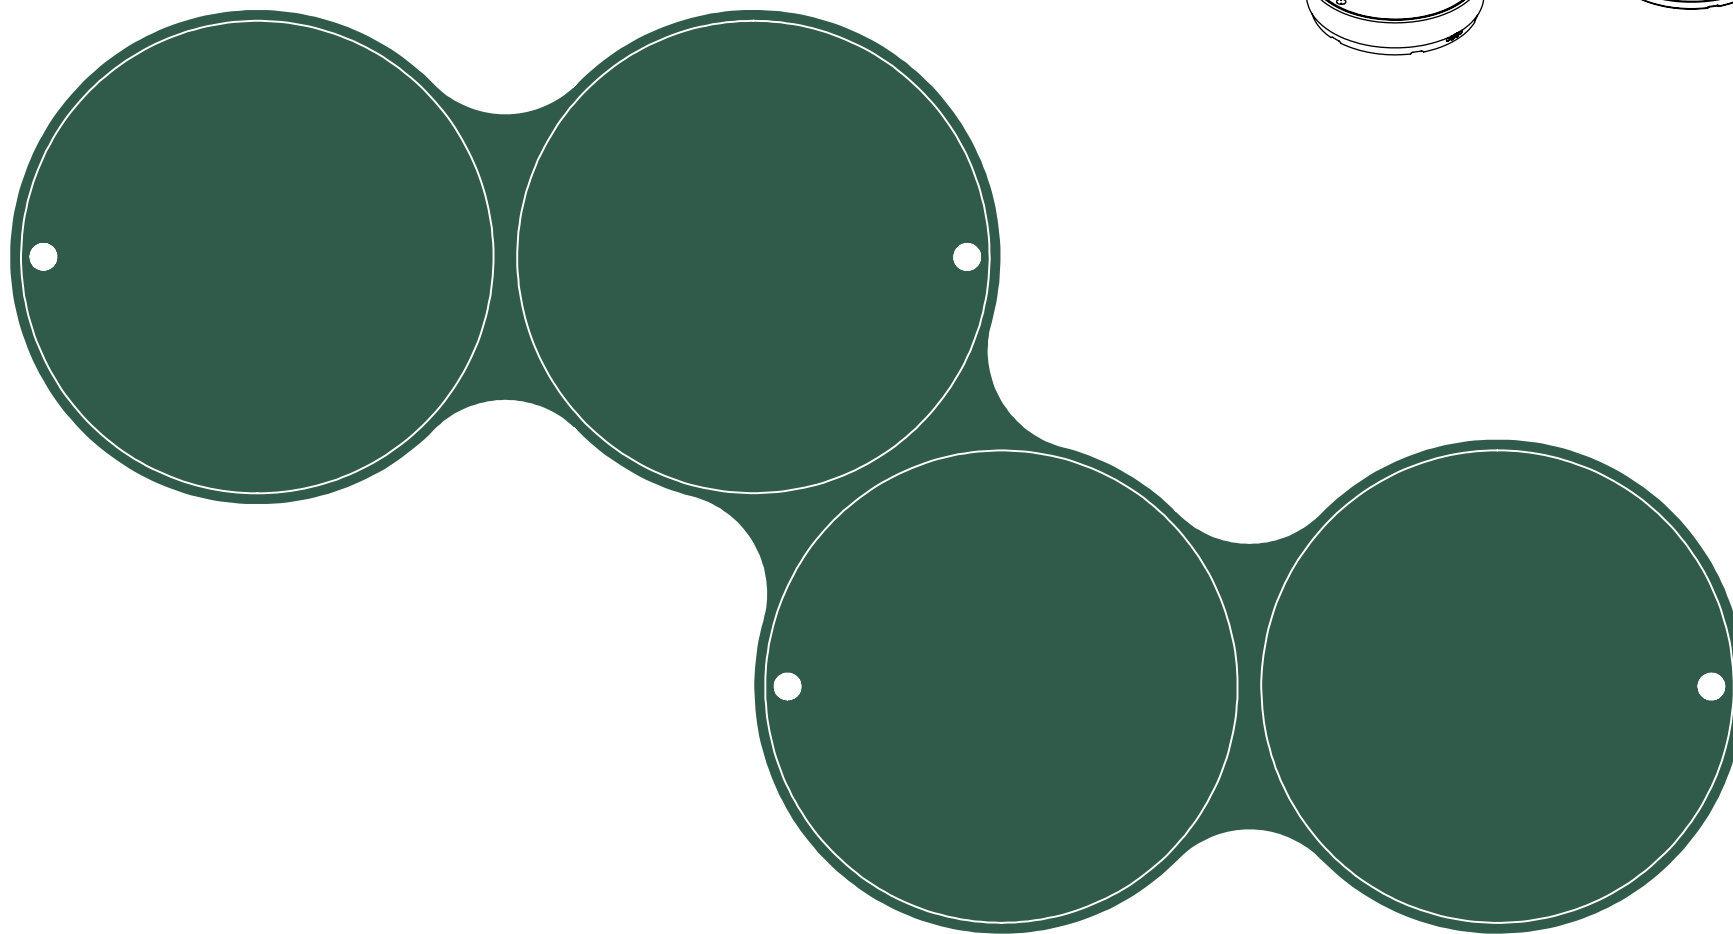


CIRCUS QUADRO

#213 4

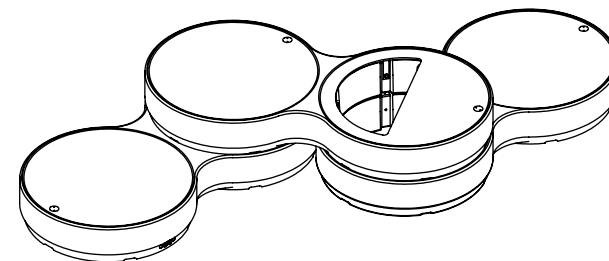


CIRCUS ASSEMBLY & CONFIGURATION VIDEO

GB
DK/DE/ES/FR


INDEX:	PAGE
Item list	01-02
Vareliste/ Artikelliste/ Lista de artículos/ Liste d'articles	
Preparing the bases	03
Klargøring af baserne/Vorbereitung die basen/Preparación de las bases/Préparation les bases	
Connection Bracket B17	03
Samlebeslag/Verbindungsbeschlag/Herraje de unión/Ferrure d'assemblage	
Filling	04
Påfyldning/ Füllung/ Relleno/ Remplissage	
HPL/Wood Seat top Fixation	04-06
Montering af sædetop/Befestigung der Sitzfläche/Fijación de la parte superior del asiento/Fixation de l'assise	
Planter / Seat & Planter top Fixation B21	06-08
Beslag til plante top/ Pflanzküben-Deckel Befestigung/ Fijación de la parte superior de la jardinera/ Fixation du dessus du bac à plantes	
Ground Fixation B19	09
Nedgravning/ Bodenbefestigung/ Fijación al suelo / Fixation au sol	
Surface Fixation B20	09
Overflademontering/ Oberflächenmontage/ Superficie Montanosa/ Montage en saillie	
Concrete Block Fixation	10-11
Fastgørelse af betonblok/Befestigung des Betonblocks/Fijación del bloque de hormigón/Fixation du bloc de béton	
Shock Absorbing Surface and Impact Area	12
Stødabsorberende overflade og stødområde/ Stoßabsorbierende Oberfläche und Aufprallbereich/ Superficie de absorción de impactos y área de impacto/Surface absorbant les chocs et zone d'impact	

ITEMS INCLUDED
DELE INKLUDERET/ENTHALTENE TEILE
PIEZAS INCLUIDAS/ PIÈCES INCLUSES


#213 82 xx BASE 2

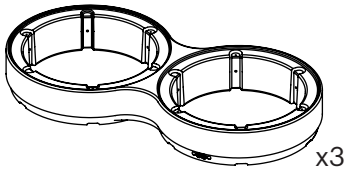


#213 91 xx HPL Seat

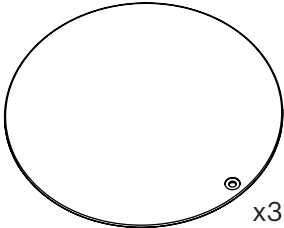


#213 94 xx HPL Seat & Planter

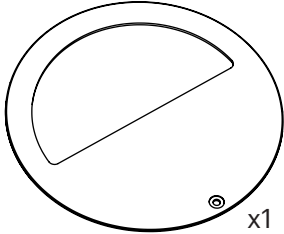

ASSEMBLY KIT HPL SEAT


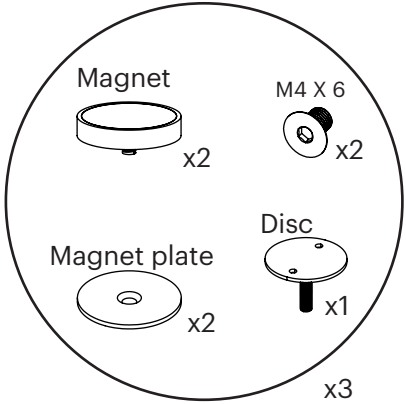


ASSEMBLY KIT HPL PLANTER TOP


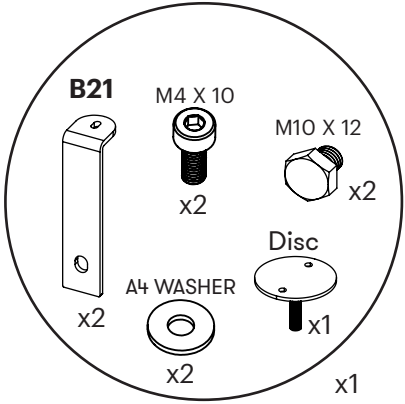


ITEMS INCLUDED








DELE INKLUDERET/ENTHALTENE TEILE
PIEZAS INCLUIDAS/ PIÈCES INCLUSES

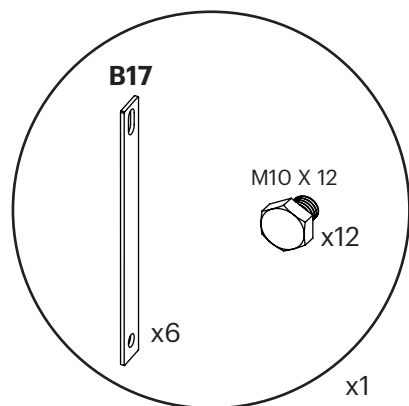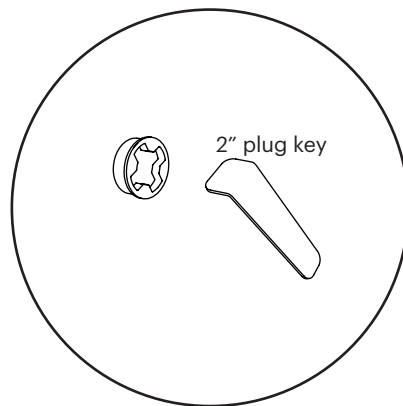QUADRO CONNECTION KIT**TOOLS****TOOLS NEEDED NOT INCLUDED**


NØDVENDIGT VÆRKTØJ MEDFØLGER IKKE/BENÖTIGTES WERKZEUG NICHT ENTHALTEN
HERRAMIENTAS NECESARIAS NO INCLUIDAS/OUTILS NÉCESSAIRES NON INCLUS

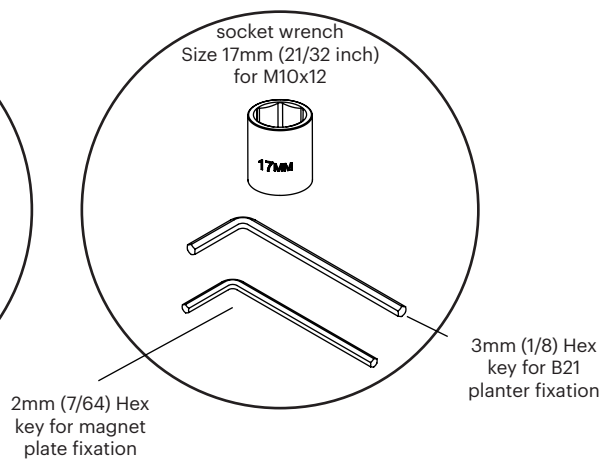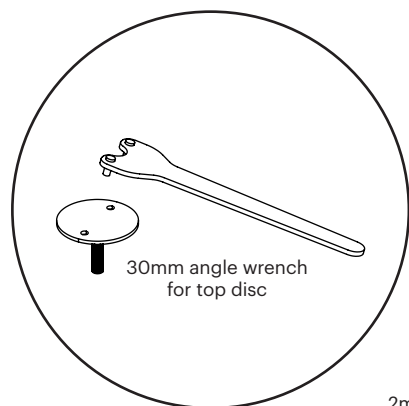**OPTIONAL SELECTION**

TILVALG / OPTIONEN / OPCIONES / OPTIONS

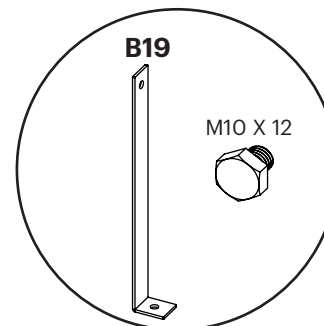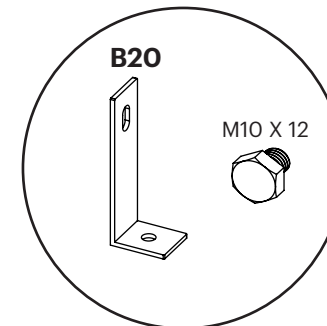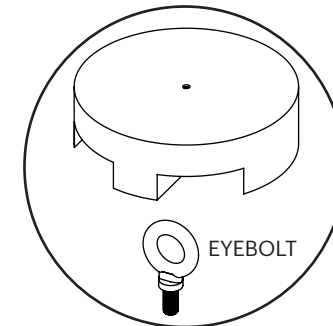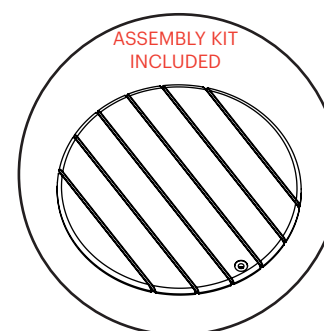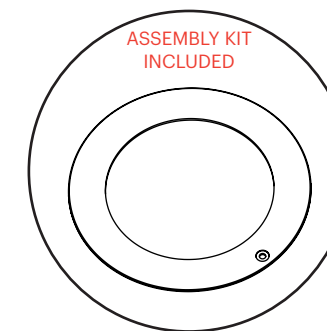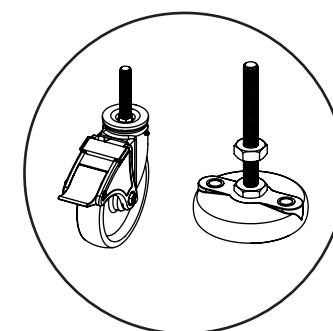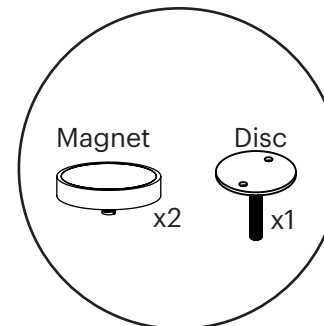GROUND FIXATION**SURFACE FIXATION****CONCRETE BLOCK****213 00 WOOD TOP****213 93 xx PLANTER TOP****WHEELS & FEET****ASSEMBLY KIT WOOD TOP**

QUADRO




PREPARING THE BASES

KLARGØRING AF BASERNE/VORBEREITUNG DIE BASEN
PREPARACIÓN DE LAS BASES/PRÉPARATION LES BASES

1. STACK THE BASES

STABLE DE BASER/STAPELN SIE DIE BASEN
APILE LAS BASES/EMPILEZ LES BASES

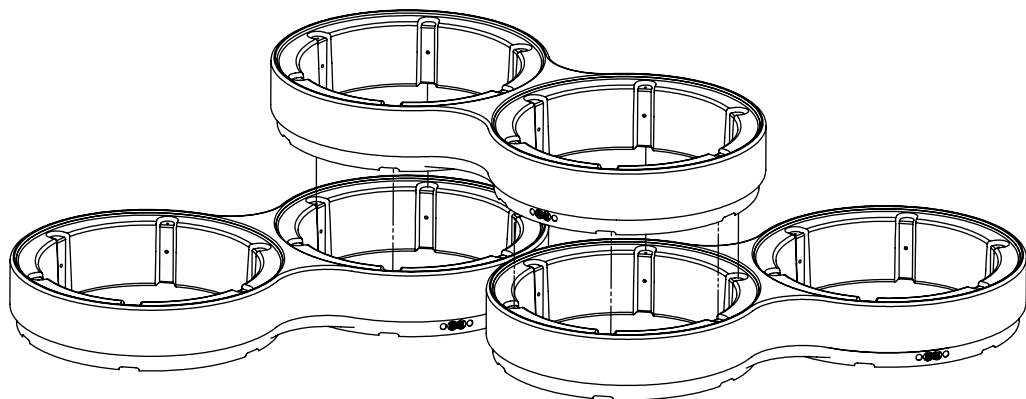


2. ALIGN THE INSERTS

TILPAS INDSATSERNE/RICHTEN SIE DIE EINSÄTZE AUS
ALINEE LAS INSERCIIONES/ALIGNEZ LES INSERTS

out-sider a/s
Kigkurren 8A, Islands Brygge
DK-2300 Copenhagen S




info@out-sider.dk
outsiderfurniture.com

QUADRO




B17 - CONNECTION BRACKET





SAMLEBESLAG / VERBINDUNGSBESCHLAG /
HERRAJE DE UNIÓN / FERRURE D'ASSEMBLAGE

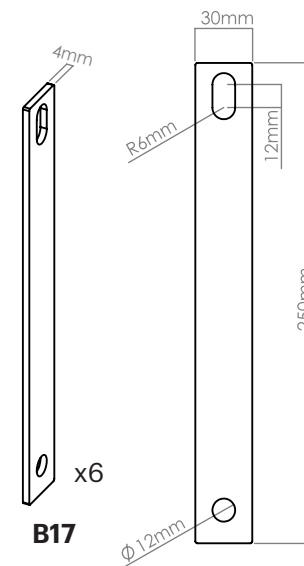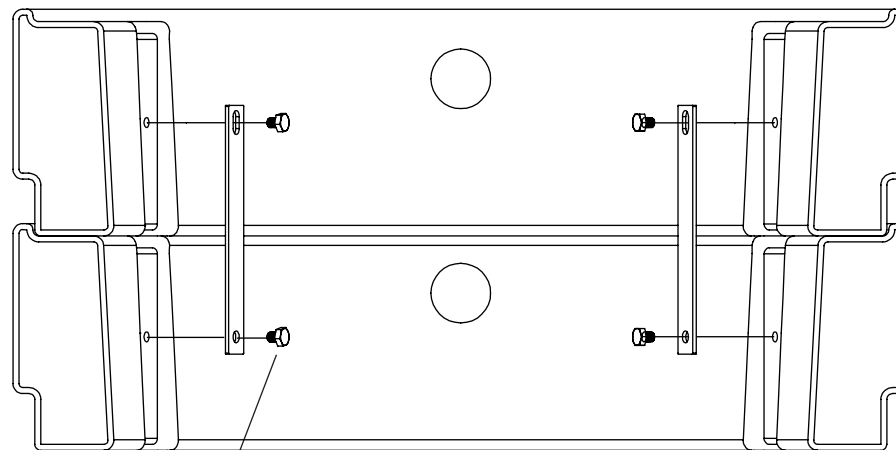

03




WATER
VAND/WASSER/AGUA/EAU

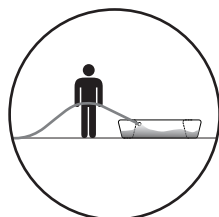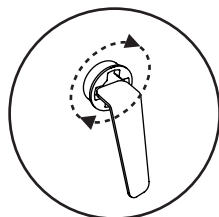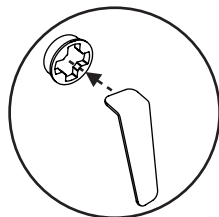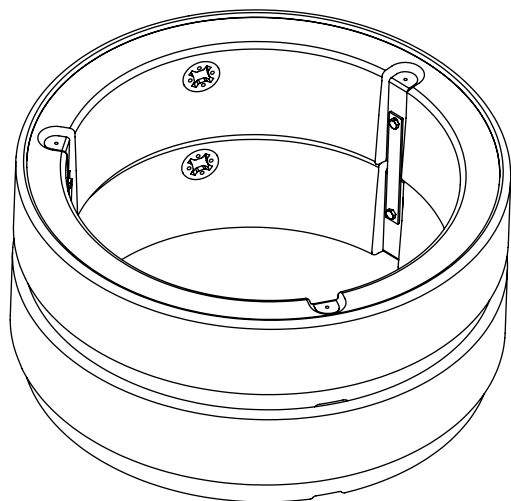

SOLO (16 kg)
+ 60 L
~ 76 kg



Measurements are excl top

QUADRO



HPL/WOOD SEAT TOP - FIXATION ASSEMBLY
MONTERING AF SÆDETOP/BEFESTIGUNG DER SITZFLÄCHE/
FIJACIÓN DE LA PARTE SUPERIOR DEL ASIENTO/ FIXATION DE
L'ASSISE


1. MAGNET
IMÁN/AIMANT

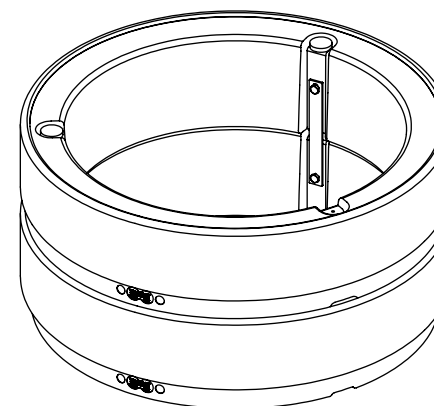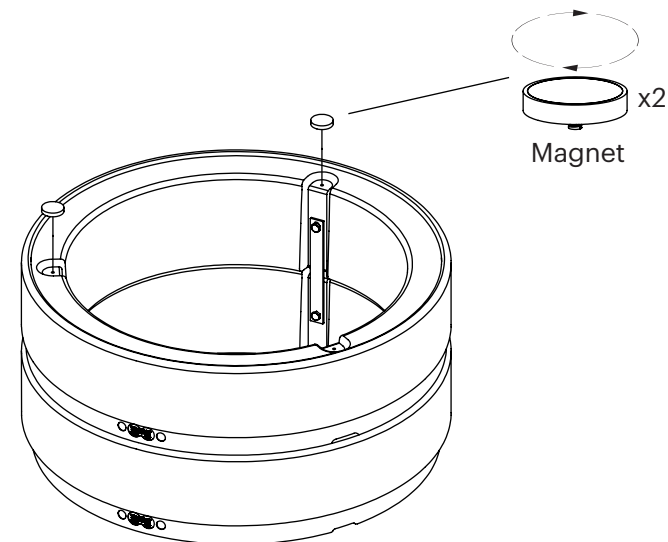

QUADRO

2. MAGNET PLATE ONLY FOR HPL TOP

MAGNETPLADE/MAGNETPLATTE/PLACA MAGNÉTICA/PLAQUE MAGNÉTIQUE

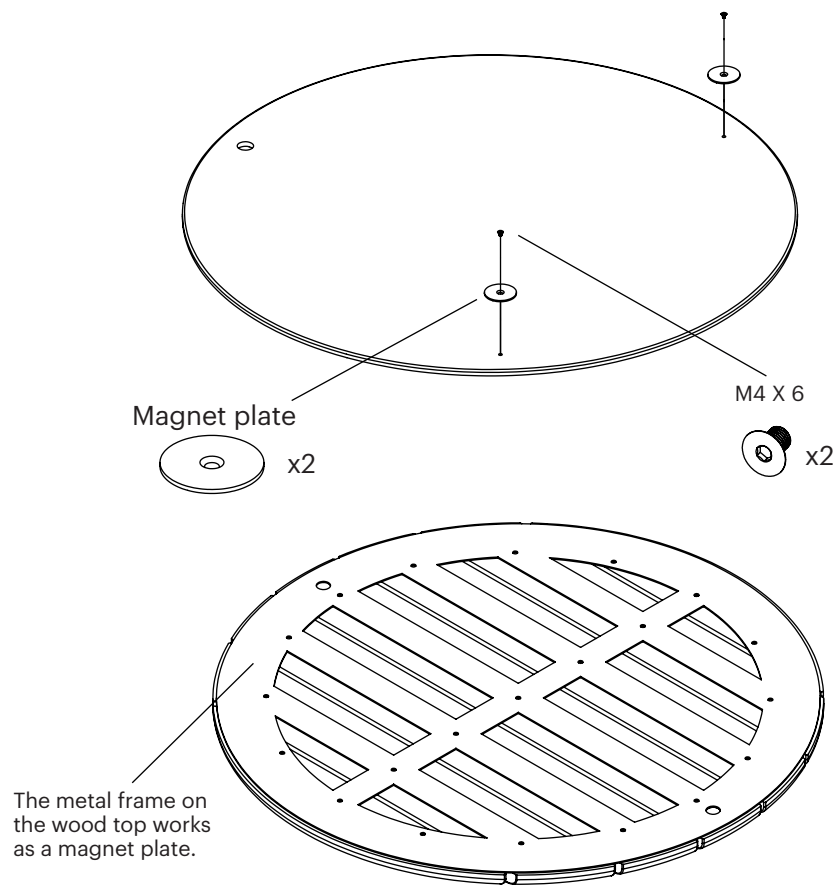


3. FITTING THE TOP

MONTERING AF TOPPEN/
MONTAGE DES DECKELS/
COLOCACIÓN DE LA TAPA/
INSTALLATION DU DESSUS

1. Align the magnet plates on the top with the magnets in the base.

2. Gently lower the top connecting the magnets.

Make sure the insert in the base align with the hole in the top

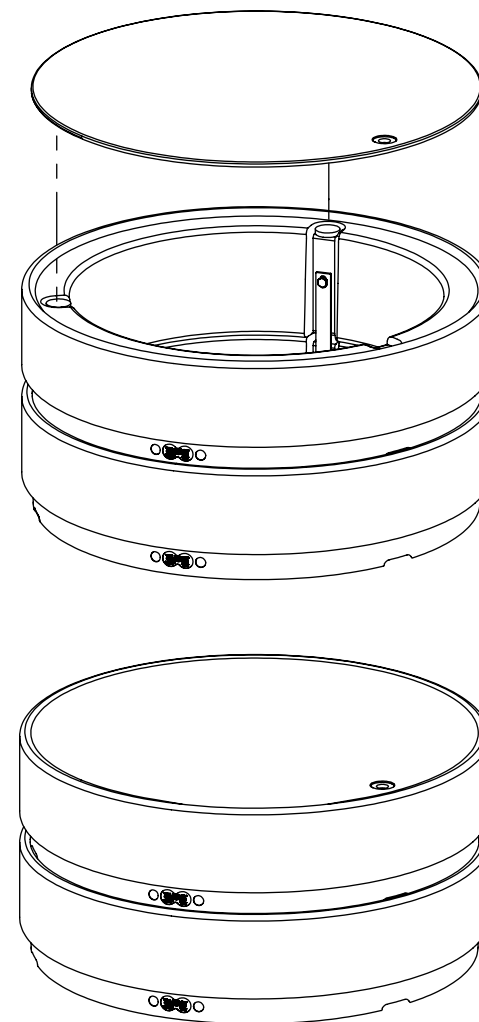

QUADRO

4. TIGHTEN THE DISC


STRAM DISKEN/SCHEIBE ANZIEHEN
APRIETE EL DISCO/SERREZ LE DISQUE

1. Place the disc in the top hole and tighten it with your hands.

Make sure to keep it vertical

2. Tighten the disc with the wrench spanner.

Do not over overtighten

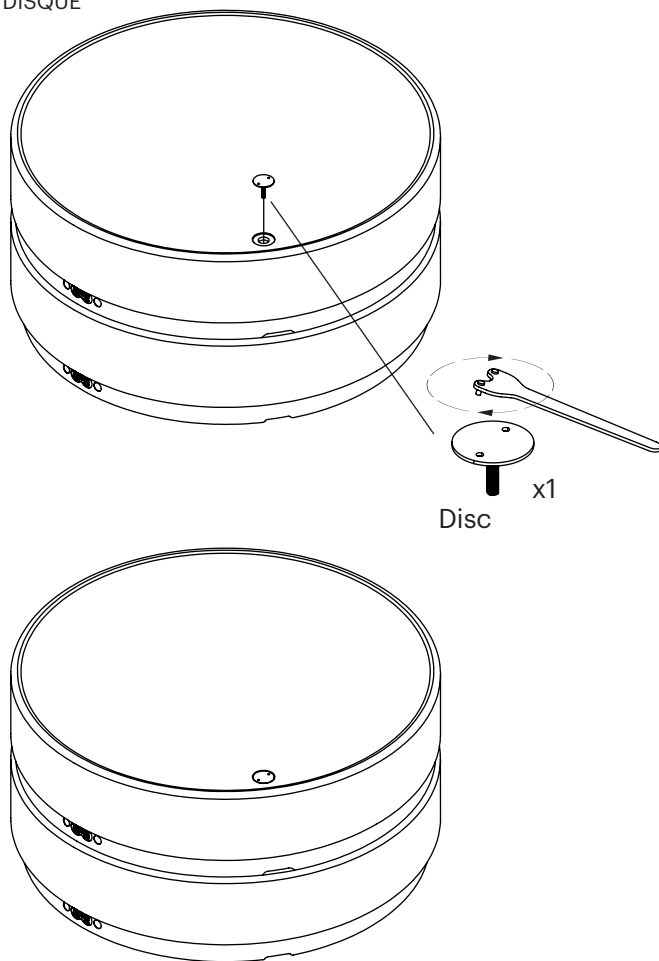

QUADRO


B21 - PLANTER/SEAT & PLANTER TOP FIXATION
MONTERING AF PLANTE TOP/BEFESTIGUNG DES PFLANZKÜBEL-DECKELS/FIJACIÓN DE LA PARTE SUPERIOR DE LA JARDINERA/FIXATION DU DESSUS DU BAC À PLANTES

1A. BRACKET FIXATION

FASTGØRELSE AF BESLAG/HALTERUNGSBEFESTIGUNG/FIJACIÓN DEL SOPORTE/FIXATION DU SUPPORT

Place the top up-side down and fixate the B21 bracket with the M4X10 with the washer inbetween.


Make sure to protect the top surface when placing it up-side down

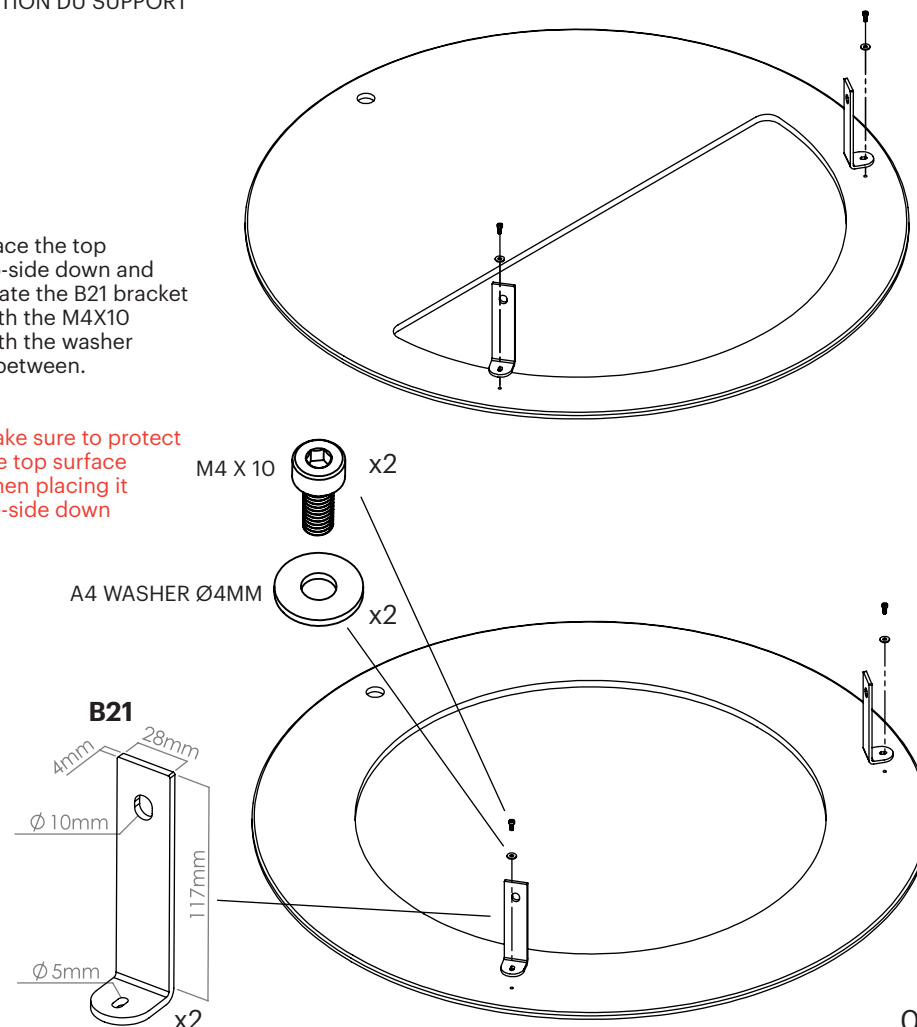

QUADRO

1B. BRACKET FIXATION


FASTGØRELSE AF BESLAG/HALTERUNGSBEFESTIGUNG/FIJACIÓN DEL SOPORTE/FIXATION DU SUPPORT

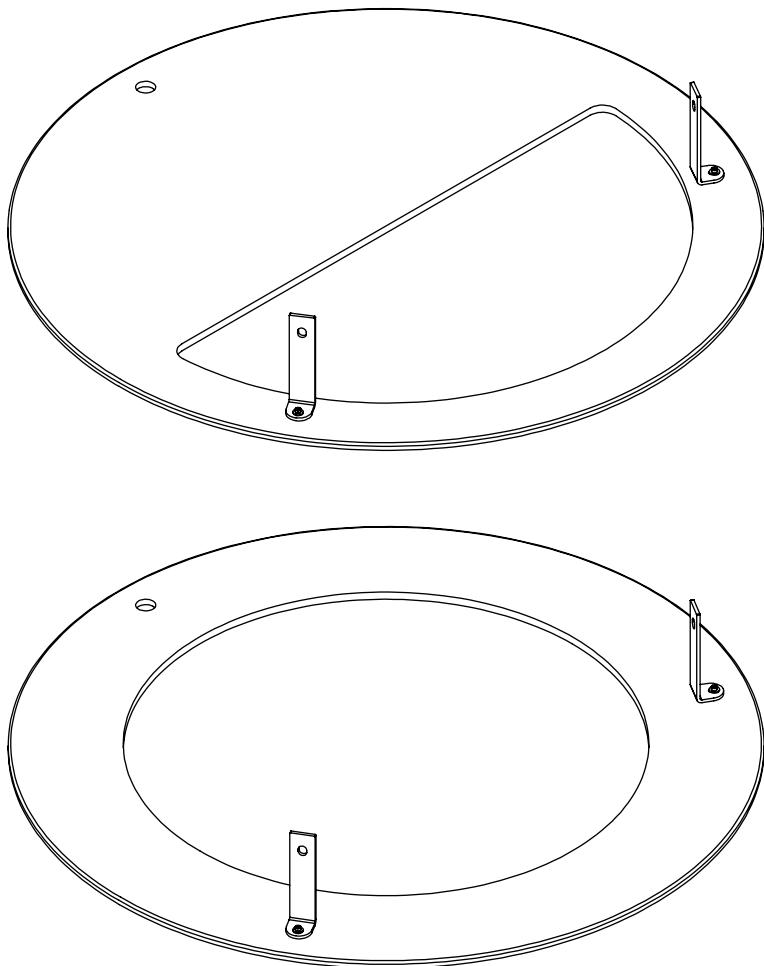

2. PLACE THE TOP ON THE BASE

PLACER TOPPEN PÅ BASEN/
SETZEN SIE DEN DECKEL AUF DEN BODEN/
COLOQUE LA TAPA SOBRE LA BASE/
PLACEZ LE DESSUS SUR LA BASE

The B21 bracket can
be fit on the inside
and the outside of the
connection brackets
B17 and B18.

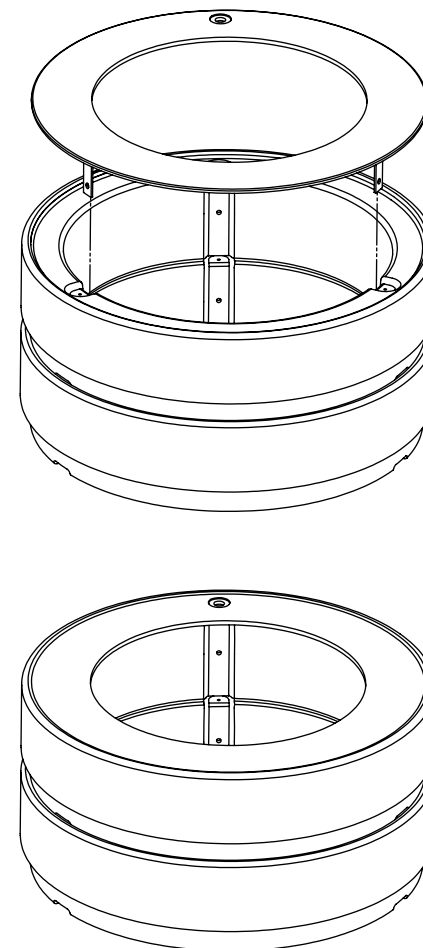


QUADRO

3. BASE & TOP FIXATION

FASTGØRELSE AF BASE & TOP/
BEFESTIGUNG VON BODEN UND
DECKEL/FIJACIÓN DE LA BASE Y LA
PARTE SUPERIOR/FIXATION
DE LA BASE ET DU DESSUS

Fixate the B21 bracket
into the insert in the
base with the M10x12

Keep in mind if your are
using connection or/and
ground/surface brackets
to place them aligned so
the connection bracket
is fixated straight.

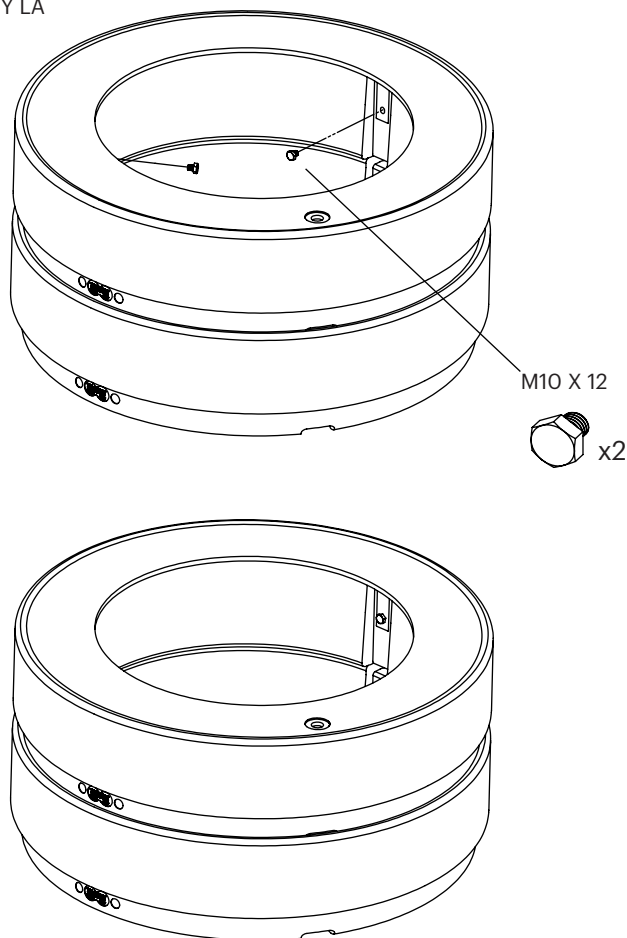

4. TIGHTEN THE DISC


STRAM DISKEN/SCHEIBE ANZIEHEN
APRIETE EL DISCO/SERREZ LE DISQUE

1. Place the disc in the
top hole and tighten it
with your hands.


Make sure to keep it
vertical

2. Tighten the disc with
the wrench spanner.


Do not over overtighten

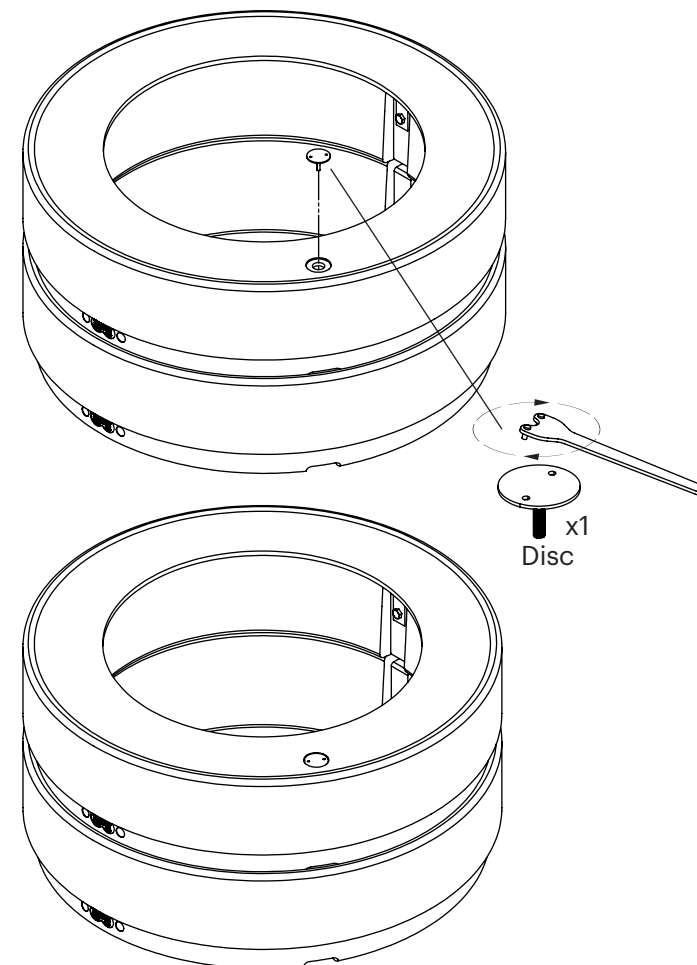


QUADRO

**B19 - GROUND FIXATION BRACKET**


NEDGRAVNING / BODENBEFESTIGUNG /
FIJACIÓN AL SUELO / FIXATION AU SOL

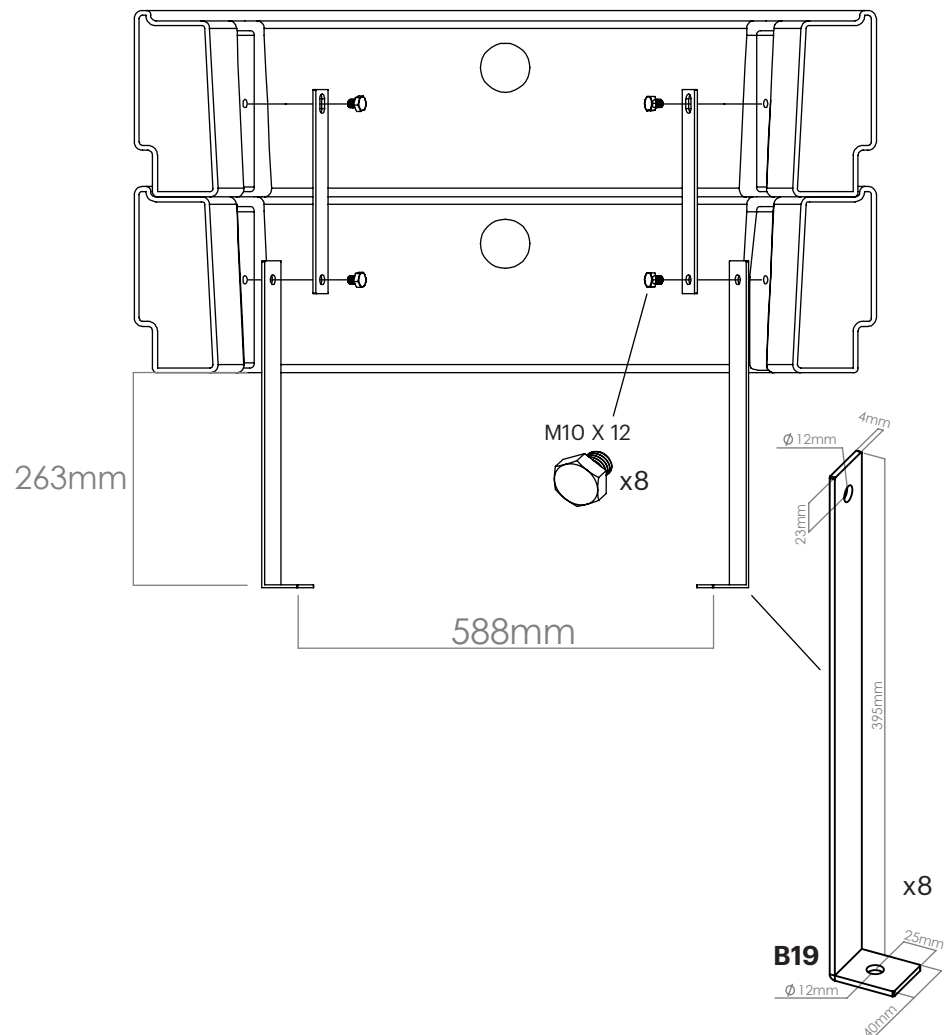


QUADRO

**B20 - SURFACE FIXATION**

OVERFLADEMONTERING/OBERFLÄCHENMONTAGE/
SUPERFICIE MONTANOSA/MONTAGE EN SAILLIE

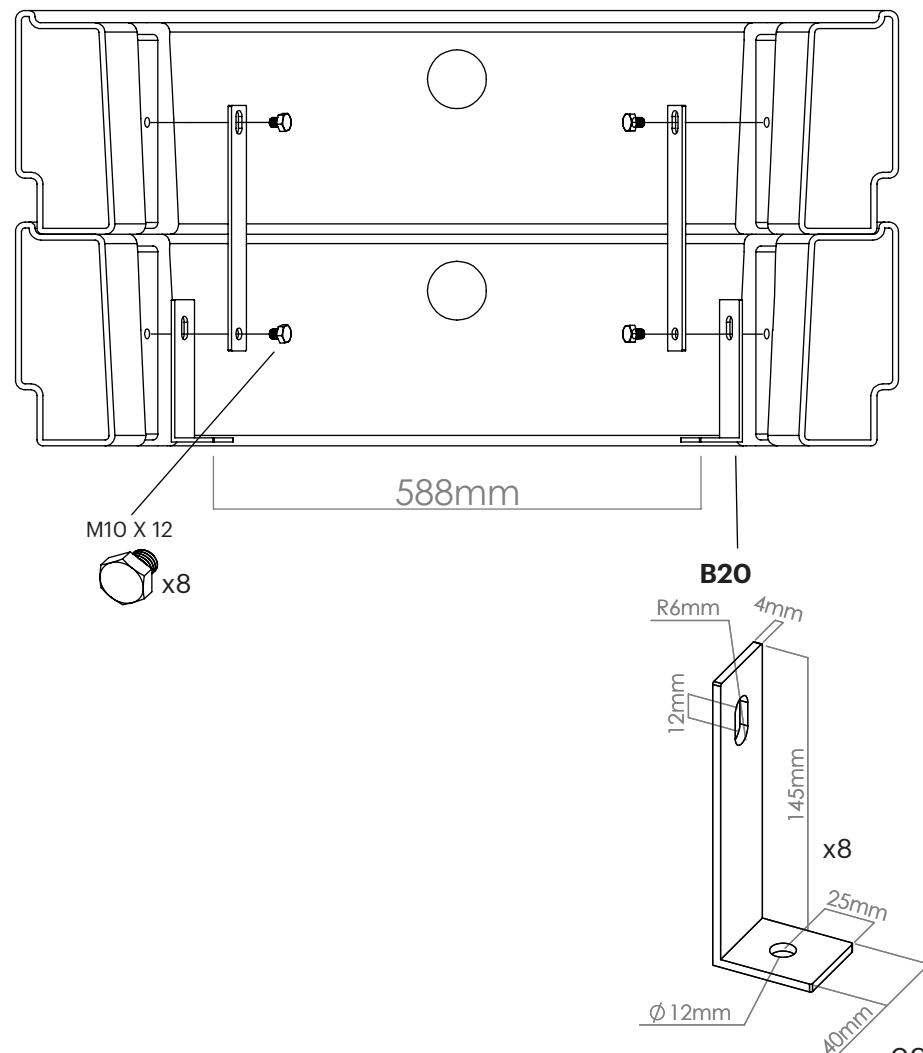

QUADRO

**B22 - CONCRETE BLOCK FIXATION**

FASTGØRELSE AF BETONBLOK/BEFESTIGUNG DES
BETONBLOCKS/FIJACIÓN DEL BLOQUE DE HORMIGÓN/
FIXATION DU BLOC DE BÉTON


1. POSITION CONCRETE BLOCKS

PLACERING AF BETONBLOKKE/
POSITIONIERUNG DER BETONBLÖCKE/
COLOCACIÓN DE LOS BLOQUES DE
HORMIGÓN/ POSITIONNEMENT DES BLOCS DE
BÉTON


Position all concrete blocks according to the selected Circus configuration.
Ensure a centre-to-centre distance of 900 mm between the M16 inserts
located at the centre of each concrete block.

OPTION A – CRANE

Use the lifting eye and a crane to
position the concrete blocks.

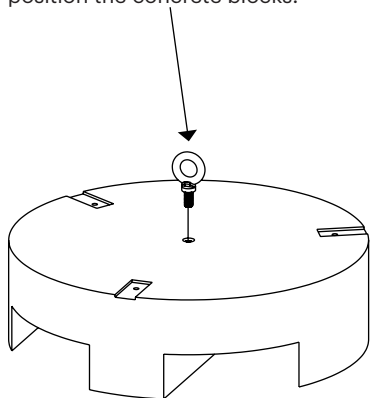**OPTION B – PALLET JACK**

If a crane is not available, use a pallet
jack to position the concrete blocks.

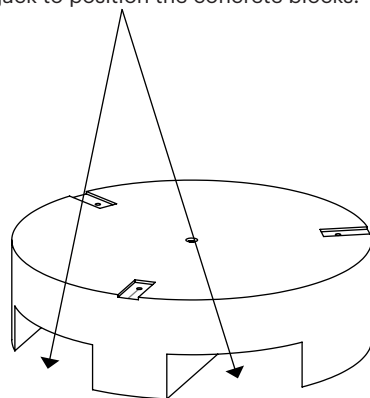**WEIGHT & THEFT SECURITY**

The concrete blocks add sufficient weight to the assembled configuration to meet out-sider's
recommended minimum total weight of 250 kg for increased theft security in public urban
environments.

Concrete blocks required: 2 pcs.

Minimum total assembled weight for quadro: 288 kg

out-sider a/s
Kigkurren 8A, Islands Brygge
DK-2300 Copenhagen S

info@out-sider.dk
outsiderfurniture.com


2. ATTACH BRACKETS

MONTERING AF BESLAG/
MONTAGE DER HALTERUNGEN/MONTAJE DE
LOS SOPORTES/MONTAGE DES SUPPORTS


Attach bracket B22 and all required connection brackets to the
Circus bases before positioning the bases over the concrete
blocks.

OPTION A – B22 ONLY

Attach bracket B22 to Level 1 Circus
bases.

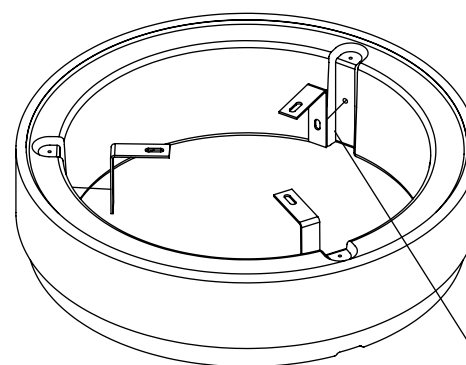**OPTION B – B22 + CONNECTION BRACKET**


Attach bracket B22 and the required
connection bracket B17 or B18 to Circus
bases that are to be stacked.

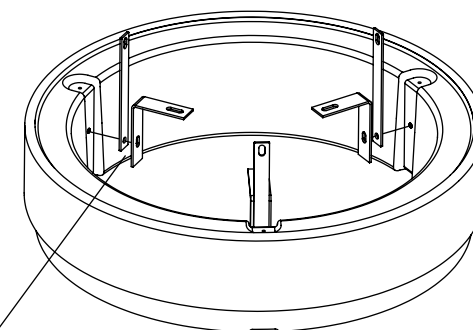

M10 X 12



QUADRO


**B22 - CONCRETE BLOCK FIXATION**

FASTGØRELSE AF BETONBLOK/BEFESTIGUNG DES
BETONBLOCKS/FIJACIÓN DEL BLOQUE DE HORMIGÓN/
FIXATION DU BLOC DE BÉTON

3. POSITION BASES

PLACERING AF BASER/
POSITIONIERUNG DER BASELEMENTE/COLO-
CACIÓN DE LAS BASES/POSITIONNEMENT DES
BASES


Lift the Circus bases over the concrete blocks and carefully lower them into position. Make sure bracket B22 aligns with the 3 × M10 inserts on top of the concrete block.

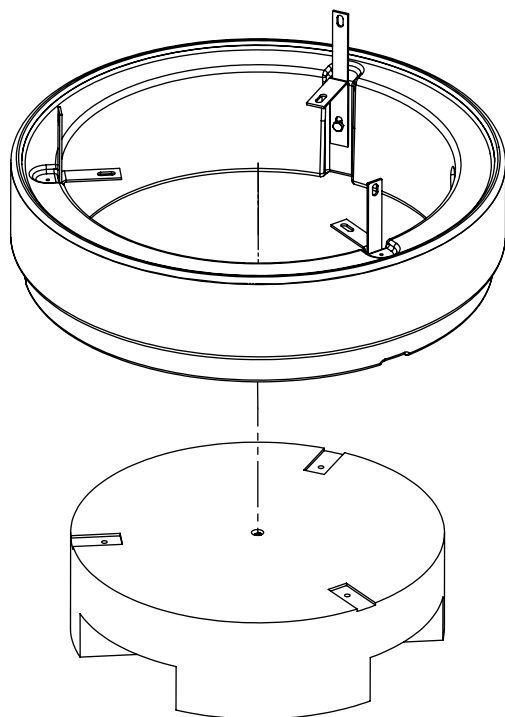**4. SECURE CONCRETE BLOCKS**

FASTGØRELSE AF BETONBLOKKE/
BEFESTIGUNG DER BETONBLÖCKE/FIJACIÓN
DE LOS BLOQUES DE HORMIGÓN/FIXATION
DES BLOCS DE BÉTON


Secure bracket B22 to the M10 inserts
on top of the concrete block.

M10 X 12

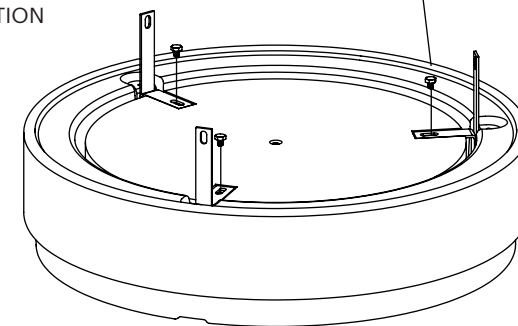**5. CONNECT / STACK BASES**

SAMLING / STABLING AF BASER/
VERBINDEN / STAPELN DER BASELEMENTE/
UNIÓN / APILADO DE LAS BASES/ASSEMBLAGE
/ EMPILAGE DES BASES


At concrete block positions
where Circus bases are stacked,
position the next base and secure
it to the pre-installed connection
brackets using M10×12 screws in
the base inserts.

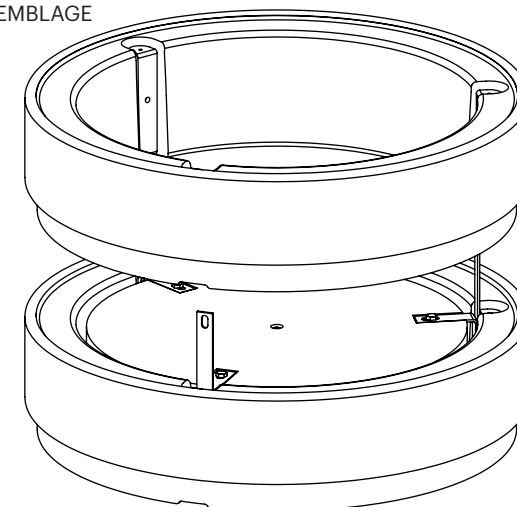

NOTE: No stacking of concrete blocks
is required for this configuration.

SHOCK ABSORBING SURFACE AND IMPACT AREA

Stødabsorberende overflade og stødområde/
 Stoßabsorbierende Oberfläche und Aufprallbereich/
 Superficie de absorción de impactos y área de impacto/
 Surface absorbant les chocs et zone d'impact

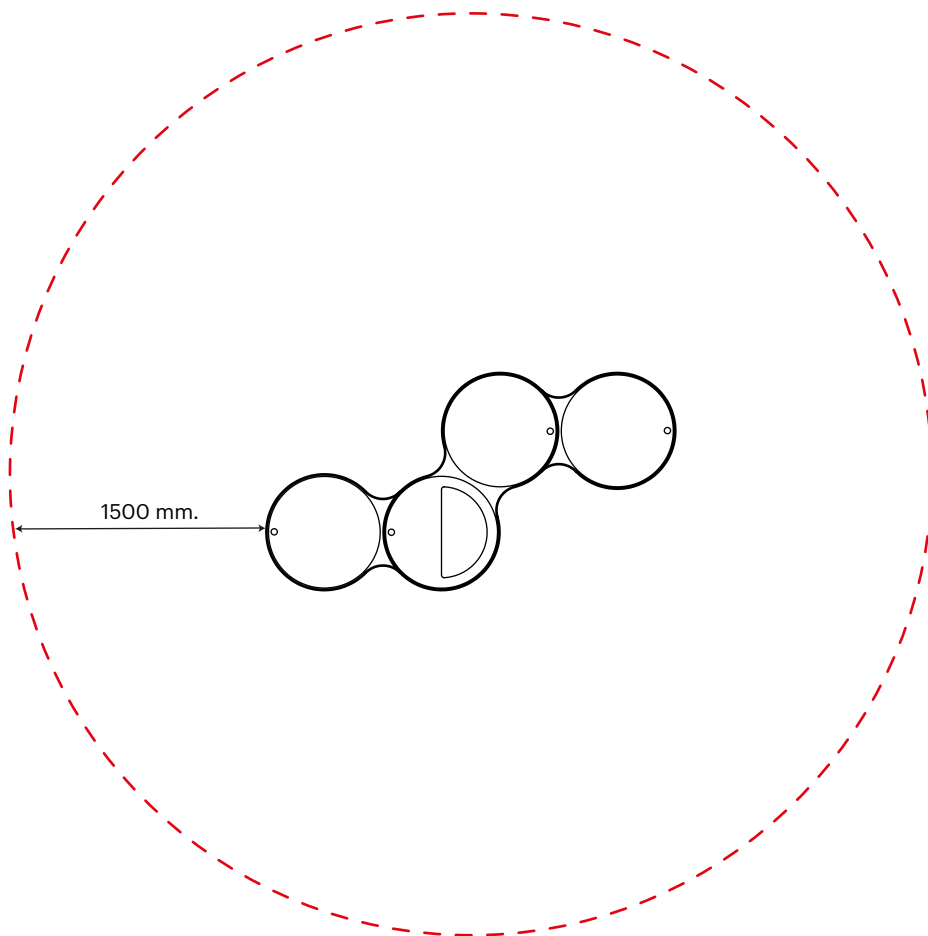

GB

Shock absorbing surface and the extension of impact area.
 In accordance with EN 1176-1:2023 we recommend an impact area of 1500mm
 (see dotted line)

For equipment with a fall height (FH) >600mm, the max. FH for the impact
 absorbing surface material shall be documented.

Note: The max. FH for the Circus Quadro is 440 mm.

DK

Stødabsorberende overflade og udvidelse af stødområdet.
 I overensstemmelse med EN 1176-1:2023 anbefaler vi et stødområde på 1500 mm
 (se stiple linje)

For udstyr med en faldhøjde (FH) >600mm, må max. FH for virkningen
 absorberende overflademateriale skal dokumenteres.

Bemærk: Den max. FH for Circus Quadro er 440 mm.

DE

Stoßabsorbierende Oberfläche und Vergrößerung der Aufprallfläche.
 Gemäß EN 1176-1:2023 empfehlen wir eine Aufprallfläche von 1500 mm
 (siehe gestrichelte Linie)

Bei Geräten mit einer Fallhöhe (FH) >600mm beträgt die max. FH für die Wirkung
 absorbierendes Oberflächenmaterial ist zu dokumentieren.

Hinweis: Die max. FH für die Circus Quadro beträgt 440 mm.

ES

Superficie amortiguadora y extensión del área de impacto.
 De acuerdo con EN 1176-1:2023 recomendamos un área de impacto de 1500 mm
 (ver línea de puntos)

Para equipos con una altura de caída (FH) >600 mm, el máximo. FH por el impacto
 Se documentará el material de la superficie absorbente.

Nota: El máx. FH para el Circus Quadro es de 440 mm.

FR

Surface absorbant les chocs et extension de la zone d'impact.
 Conformément à la norme EN 1176-1:2023, nous recommandons une zone d'impact de
 1500 mm (voir ligne pointillée)

Pour les équipements avec une hauteur de chute (FH) >600 mm, la hauteur max. FH pour
 l'impact
 Le matériau de surface absorbant doit être documenté.

Remarque : Le maximum. FH pour le Circus Quadro est de 440 mm.